




★ 使用前请仔细阅读产品说明书,说明书视图与实物可能有所差异,具体实物以包装配套为准。

产品参数	长	宽	高	频率	遥控距离	行驶时间	最快速度	船体电池	遥控器电池	料仓容量
	397mm	145mm	150mm	2.4G	≥300m	2小时	≥15KM/H	7.4V锂电池	4x1.5V AA (需另购)	300mL



一. 产品特点

1. 本产品使用2.4G自动对频技术,超强的抗干扰能力,可实现多人同时操控。
2. 诱饵船配备有顶灯和后灯光,傍晚也可使用。
3. 不倒翁:船在使用中如受到撞击导致翻船,船体通过重心力可自动翻转过来。
4. 低电压保护功能:诱饵船在使用过程中电池电量不足时,遥控器会发出“滴滴”报警声,有效确保诱饵船返航到岸。
5. 诱饵船配置540双马达,动力更强劲。
6. 诱饵船采用7.4V锂电充电电池,续航更持久,电池寿命更长。
7. 船顶有电量显示功能,船顶电源开关开启后,可实时检测到船体电量;4个蓝灯常亮表示满电状态,剩1个灯在闪烁表示电量不足,请及时充电。
8. 诱饵船有卡死保护功能,当螺旋桨不小心卡到水草或其它异物时,船体会停止工作15秒后,继续正常操作,可有效保护电机和线路板的使用寿命。
9. 遥控器配有转向微调,确保诱饵船直线行驶。
10. 遥控器配有油门调速微调,打窝时可使用慢速前进进行打窝,不打窝时可调最快速度进行愉快的玩耍。
11. 遥控器配有电量指示灯,红灯慢闪时表示电量不足,请及时更换电池。
12. 遥控器开启后,五分钟内无任何操作,会进入休眠状态,以节省电池电量;在休眠状态拨动任意功能按键即可唤醒使用。


二. 产品平面图解

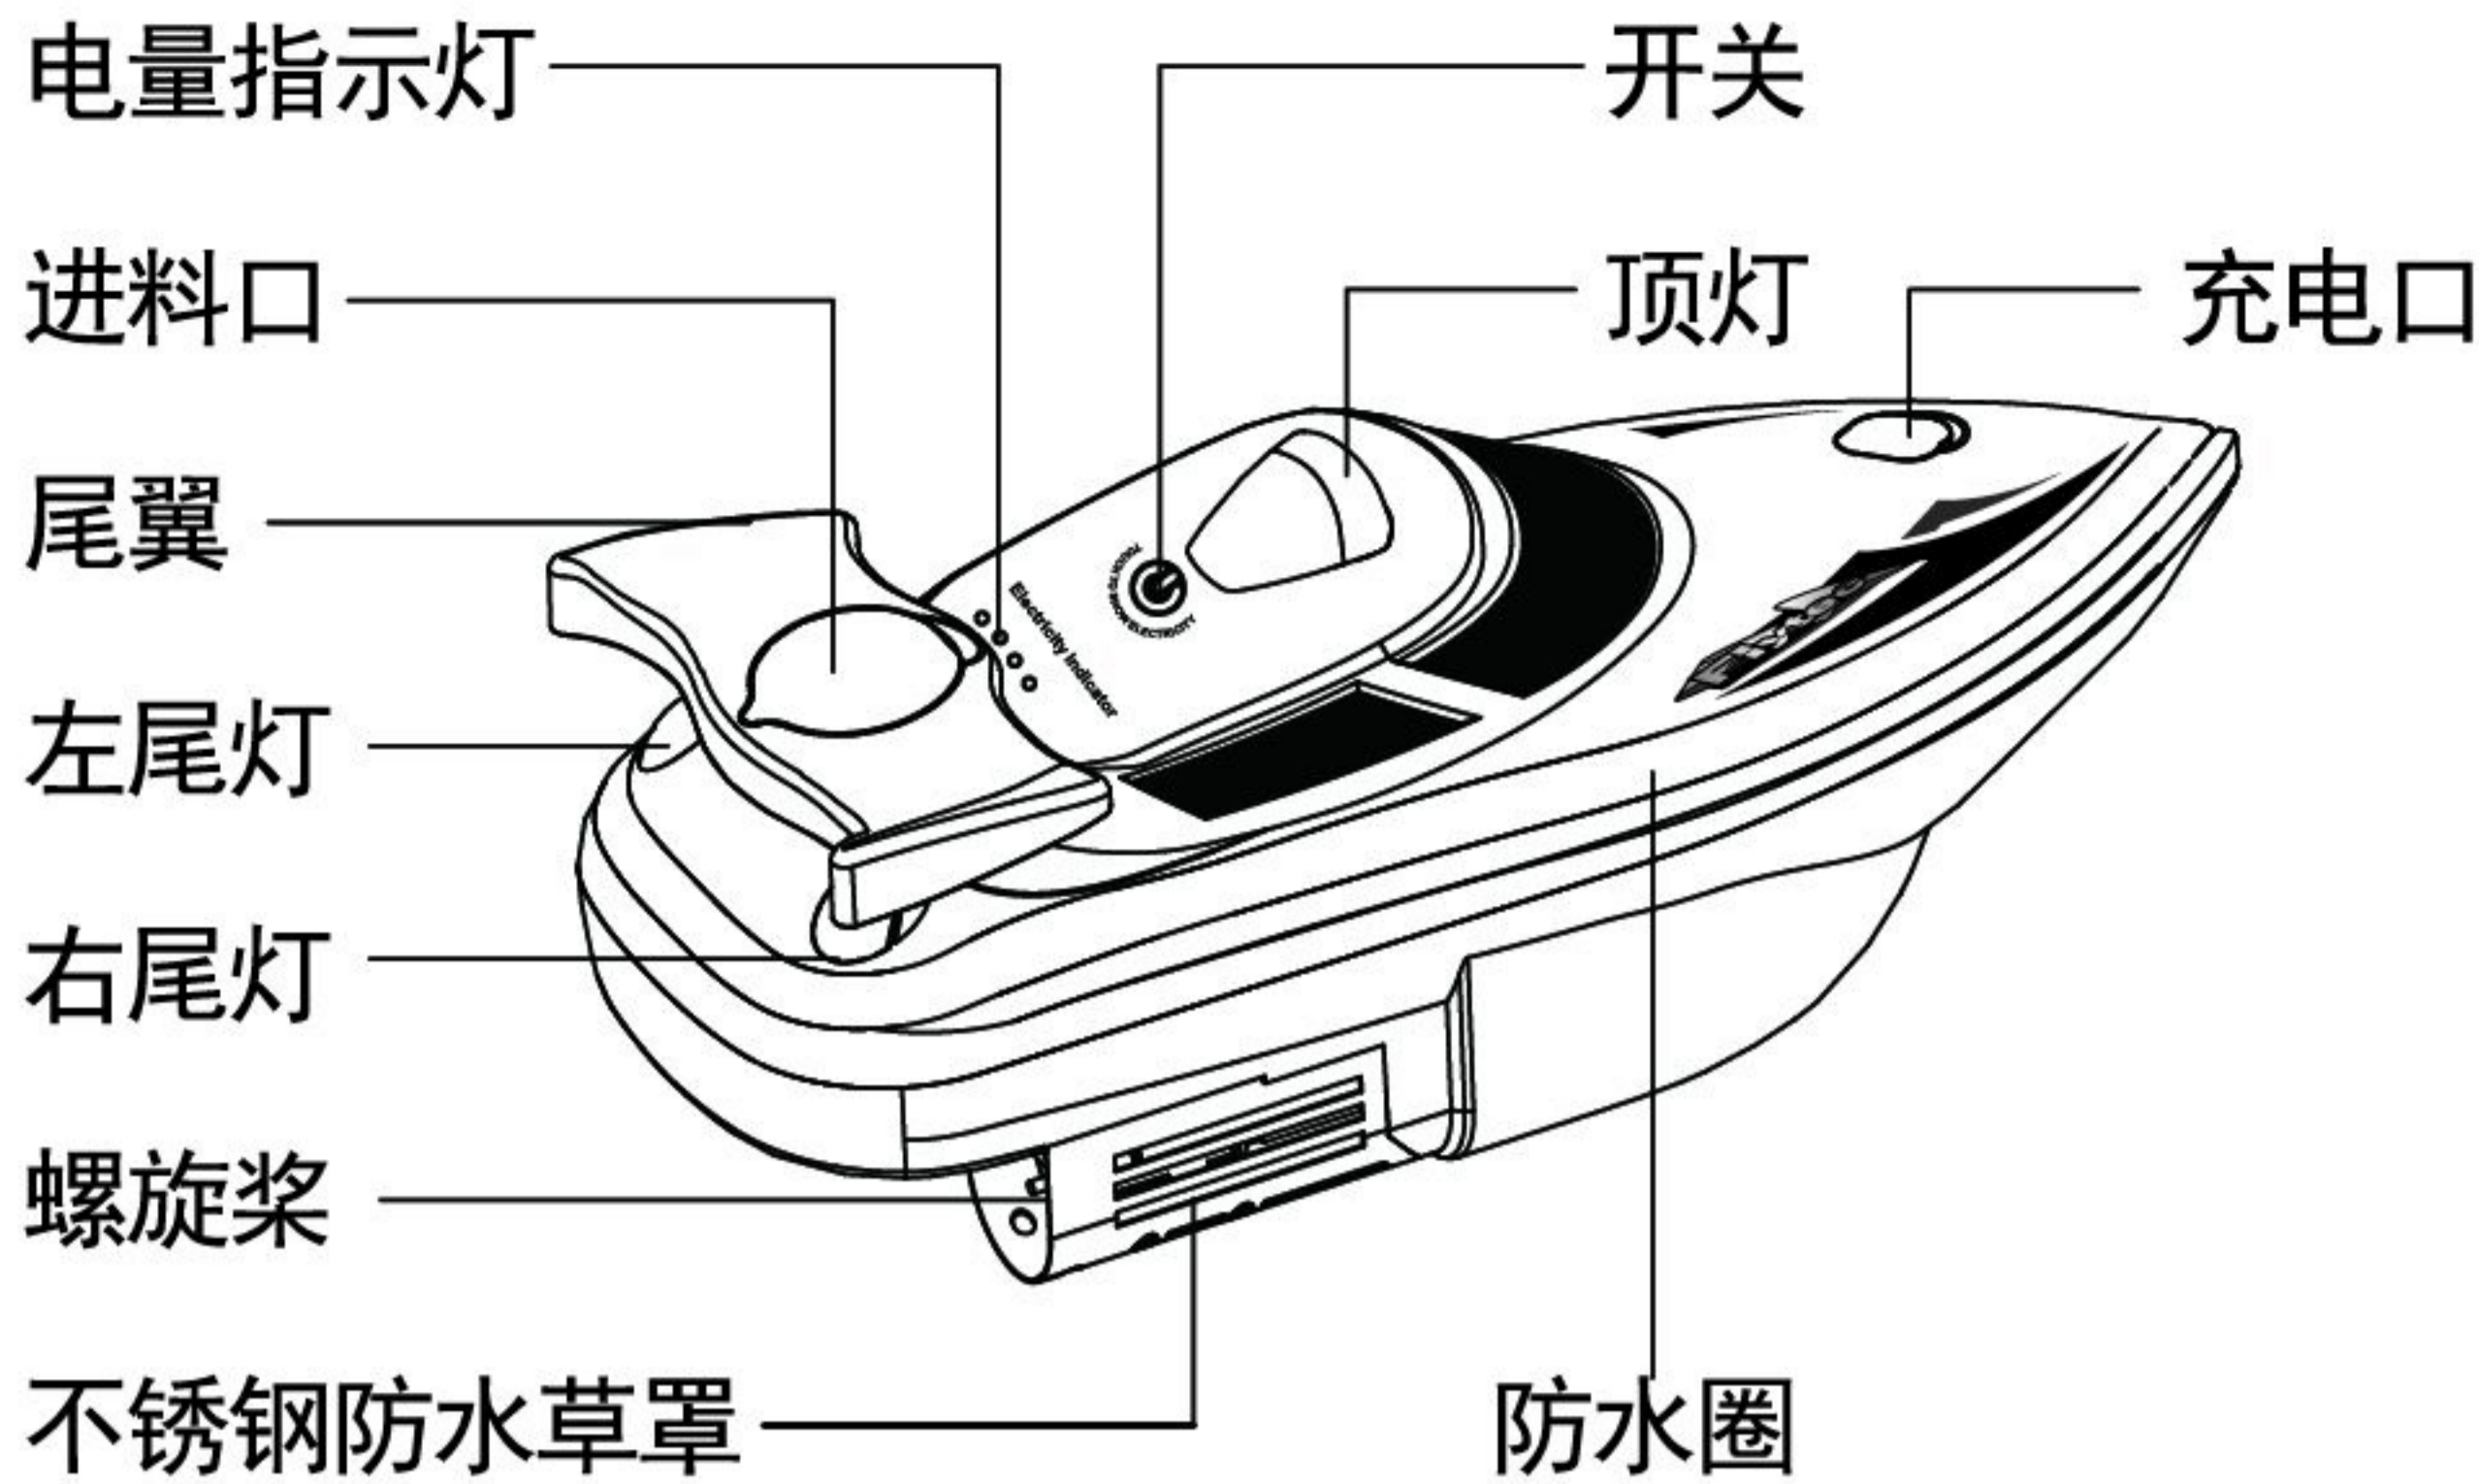

诱饵船船体指示图

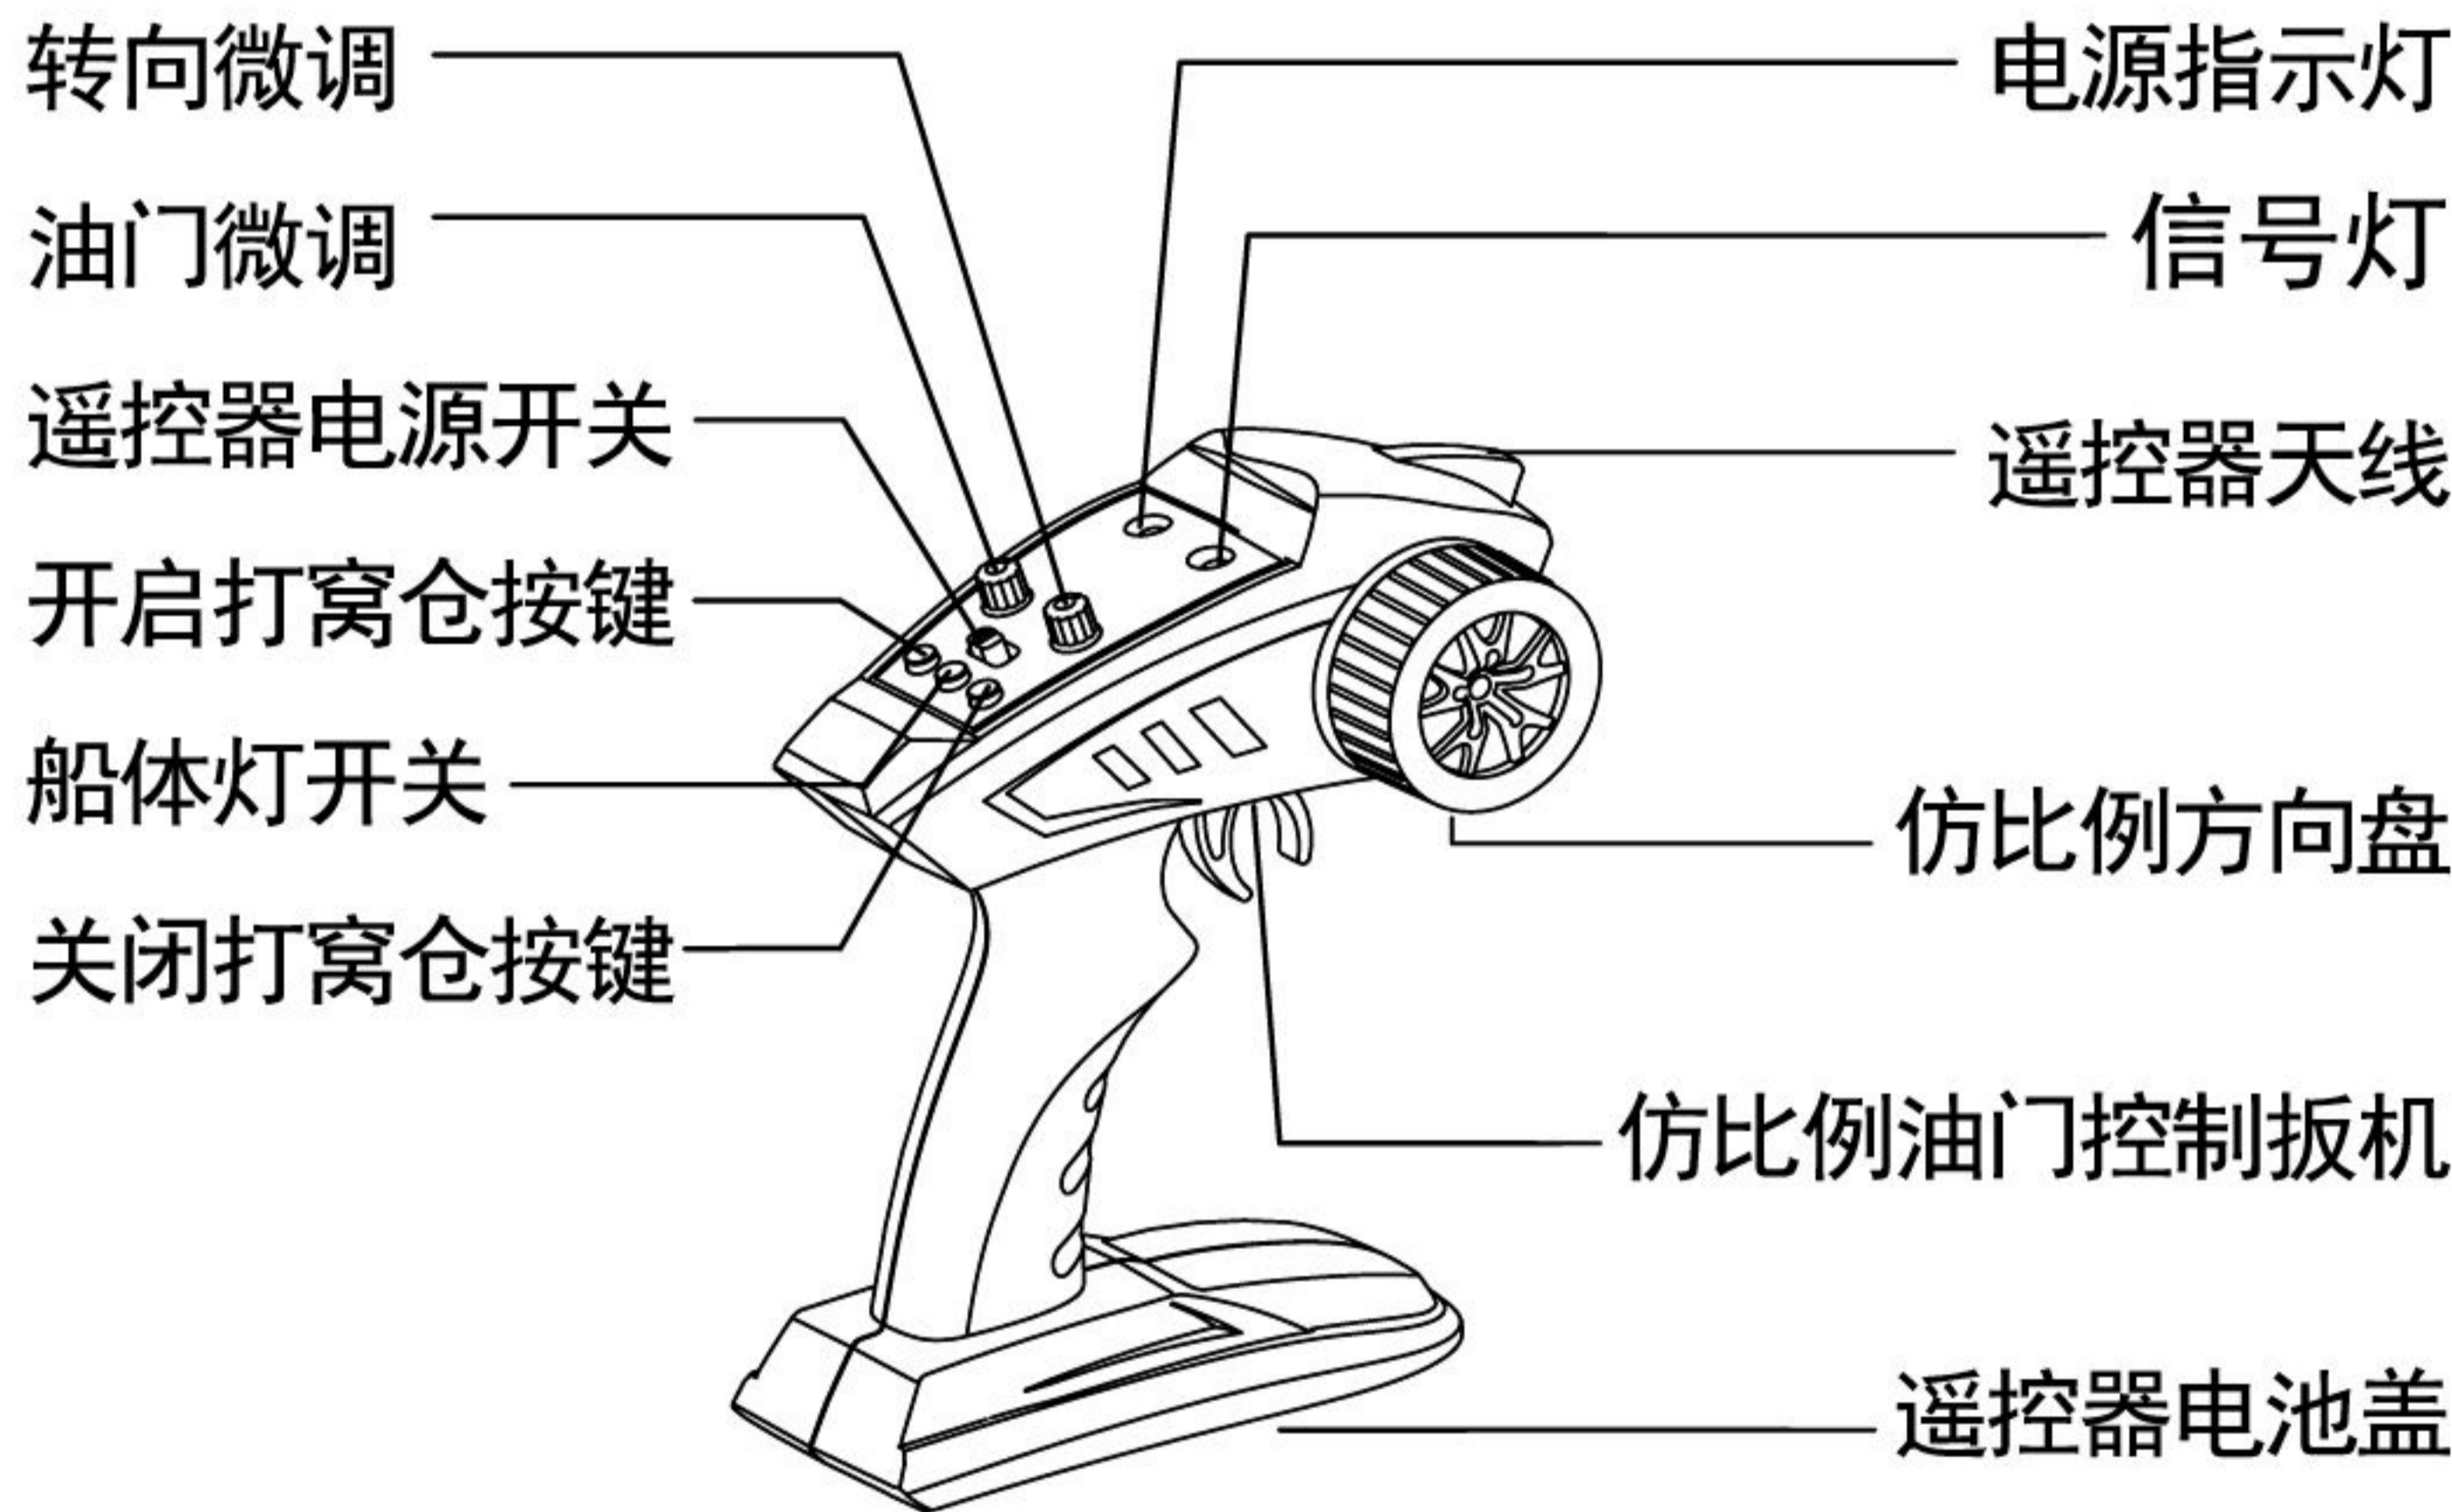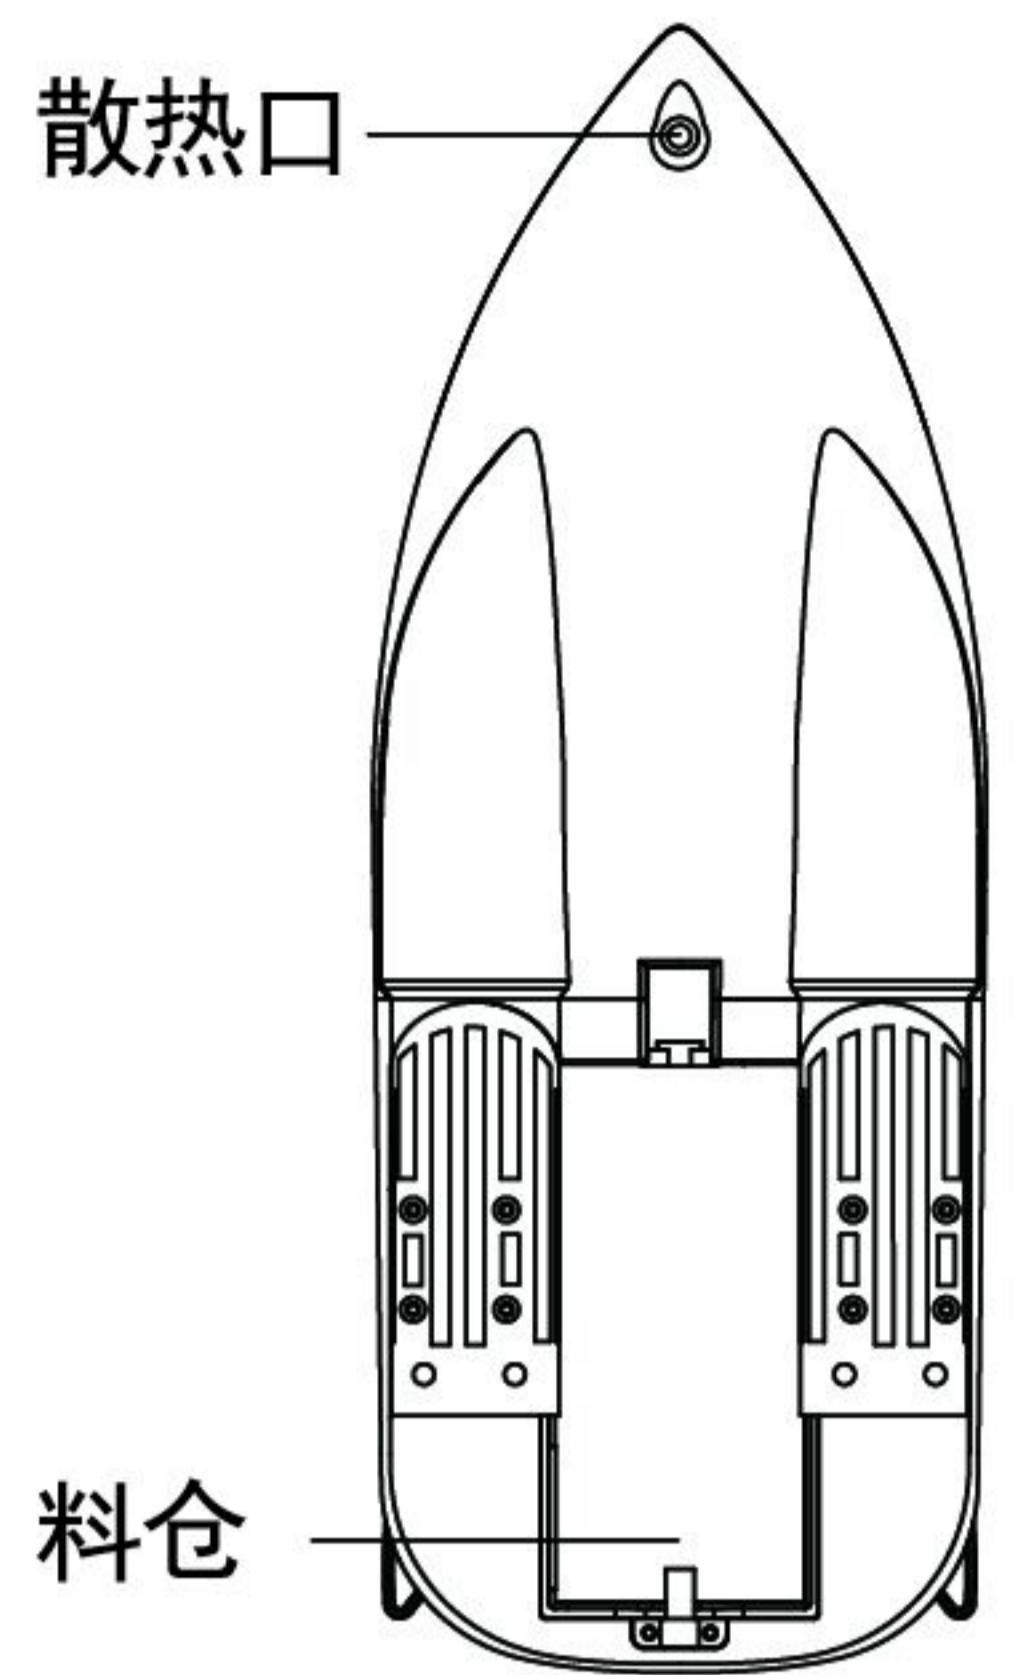


遥控器功能指示图

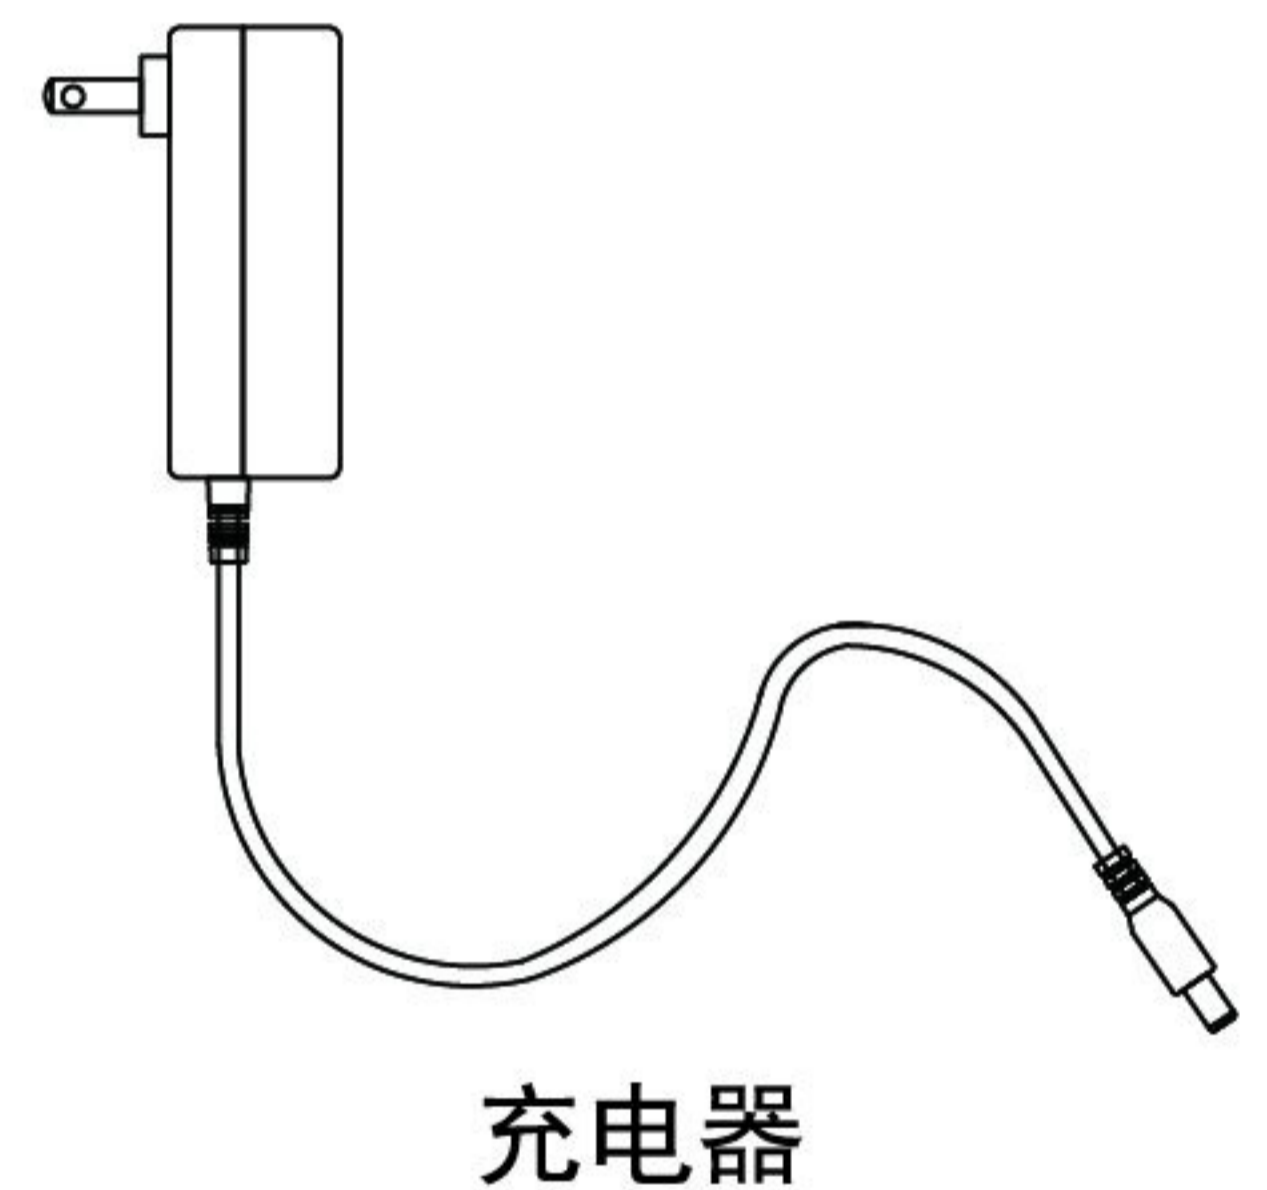

三. 玩前准备

1. 如图, 打开遥控器电池盖, 按照电池箱极性标识正确安装 4 节 “AA” 电池 (需另购), 再将电池盖盖上。
2. 遥控器电源开关在开启前, 速度控制扳机、方向盘应处于原始状态, 转向微调应处于中位 (微调旋钮上的凹点对准遥控器贴纸的微调中心位置)。
3. 使用前先确认好船体充电口的胶塞和船底散热口胶塞已经盖好, 以免渗水导致本产品内部零件受损。
4. 装饵料前先确认料仓是闭合状态, 然后再从料仓口装入饵料。

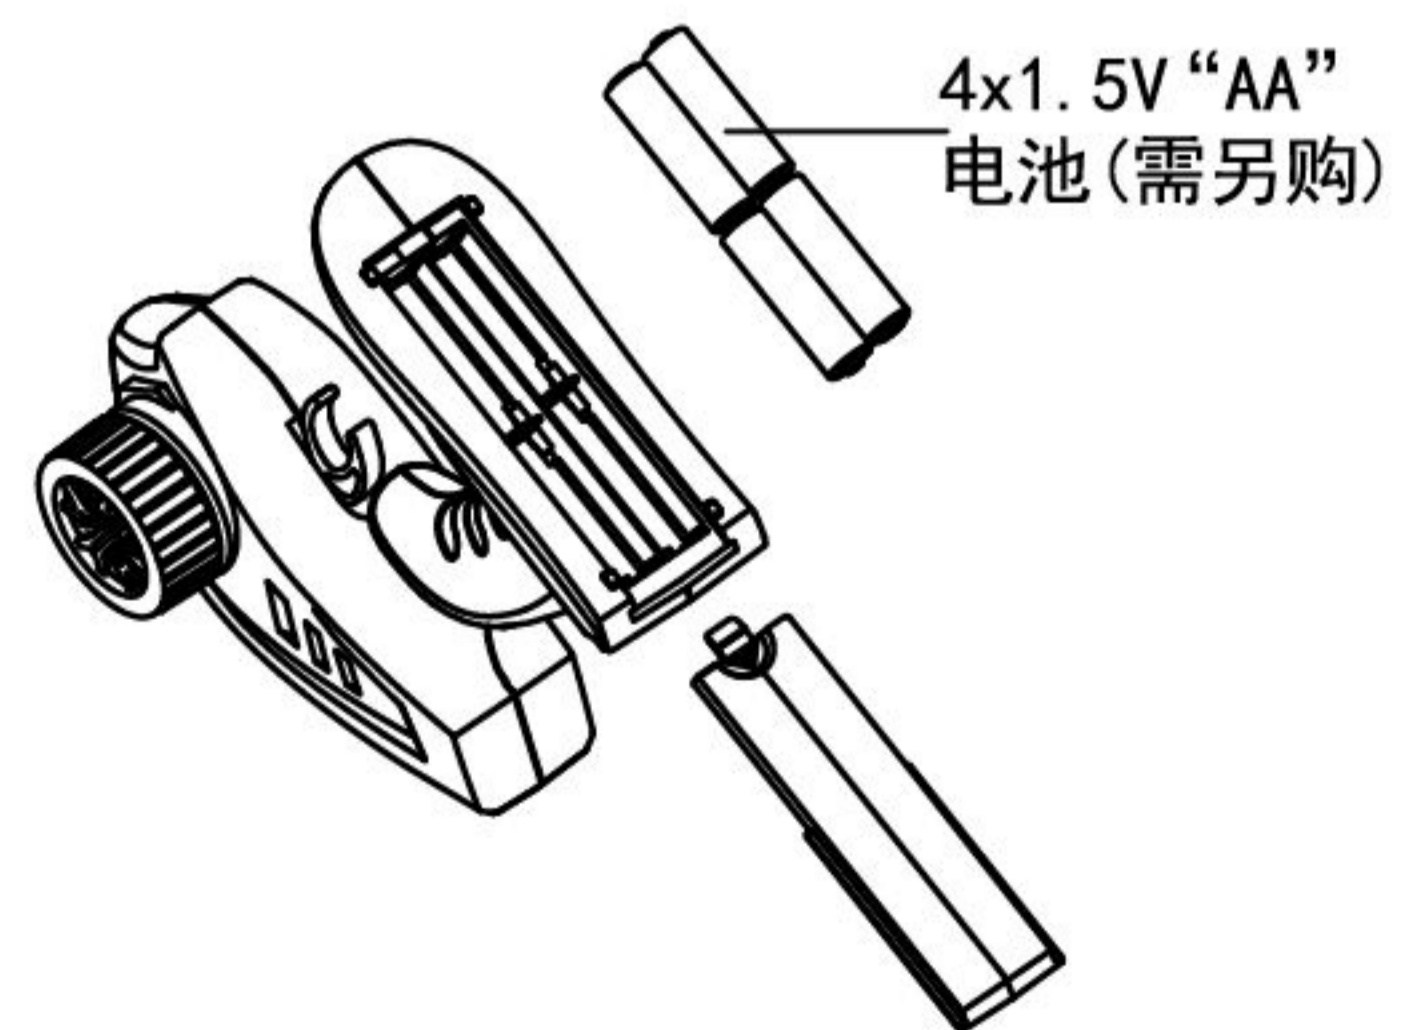


四. 下水及对频说明

1. 先打开遥控器电源开关, 遥控器绿灯闪烁, 再打开诱饵船电源开关, 船体灯光闪烁, 电量指示灯常亮。此时听到遥控器“滴滴”两声后, 遥控器绿灯由闪烁变常亮, 船体顶灯及尾灯常亮, 表示对频成功, 此时可以自由操控诱饵船进行打窝。
2. 当多艘诱饵船同时使用时, 不能同时进行对频, 需逐个对频, 否则会导致对不上频或对错频, 如果对不上频或遥控器/诱饵船互相交换后需重新对频: 需将船体和遥控器断电后, 重新开启船体电源开关, 再长按遥控器中间灯光控制按钮不松, 同时打开遥控器电源开关, 听到“滴滴”两声, 遥控器和船体灯光常亮, 说明对频成功。


五. 附属功能（拉绳拖网）说明

1. 按一下遥控器左边料仓打开按键, 将渔网的线头放到料仓内, 然后按一下遥控器右边料仓关闭按键, 将料仓关闭; (如下图A)
2. 遥控器扳机向后推使船体向前进, 船体前进的同时边放渔网(渔网下水前先整理好, 避免放网过程中发生缠绕); (如下图B)
3. 将渔网拉至目的地位置后, 按一下遥控器左边料仓打开按键, 即可远程脱钩, 返航时请避开渔网, 避免螺旋桨被缠绕。(如下图C)

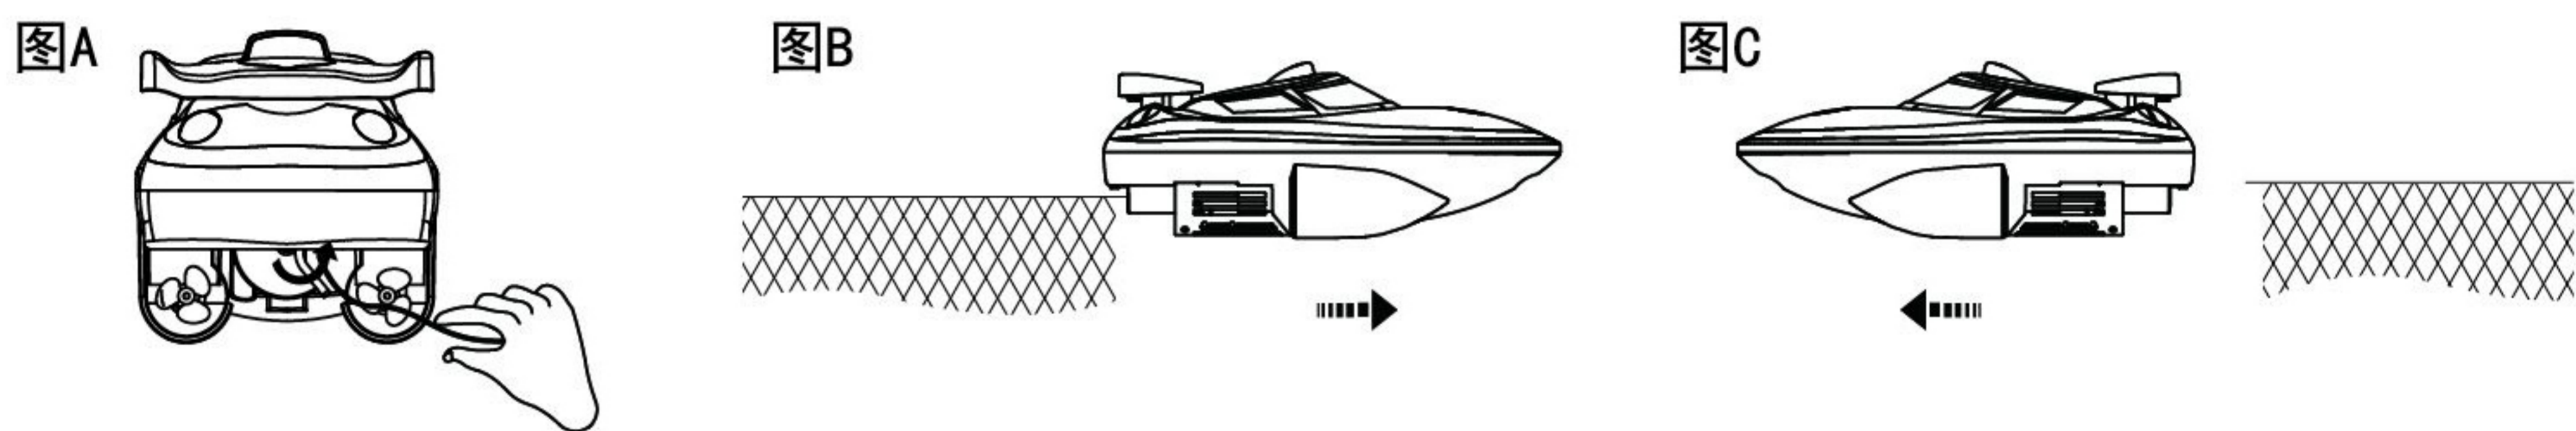

六. 电池充电

按图示将充电器圆形插头插入到船体的充电口, 再将充电器插入电源插座, 此时充电器的红灯亮起, 船体电量指示灯依次闪烁, 充电时间约6-7小时; 充电器黄灯亮起和船体的电量指示灯全部常亮时, 表示充电完成, 请断开所有连接。(如右图)

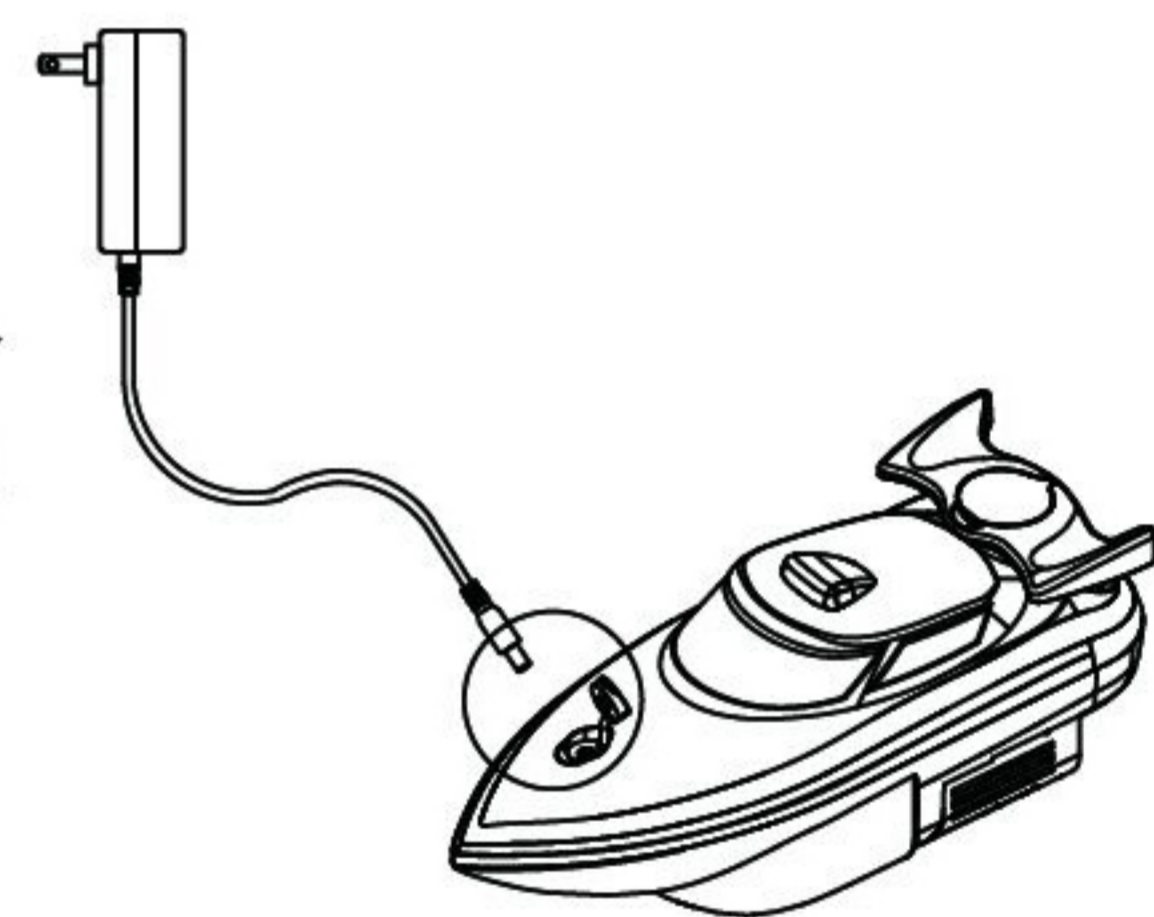

⚠ 注意


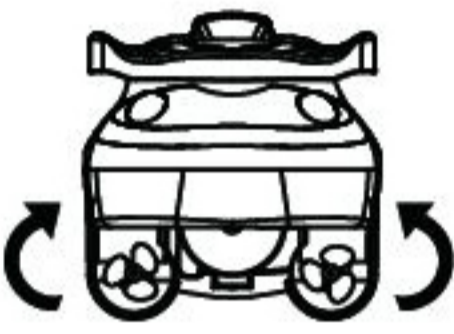
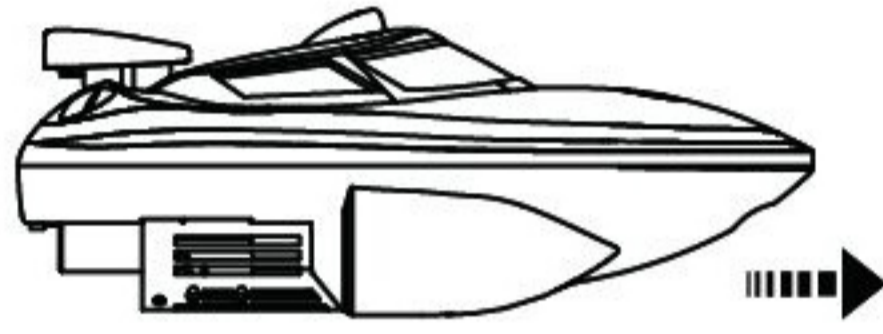

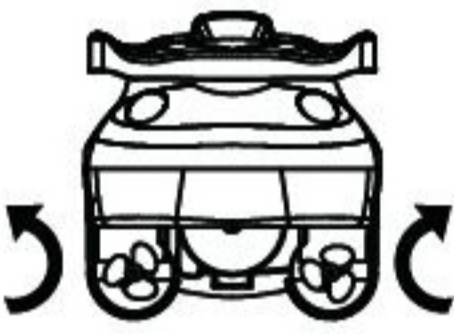
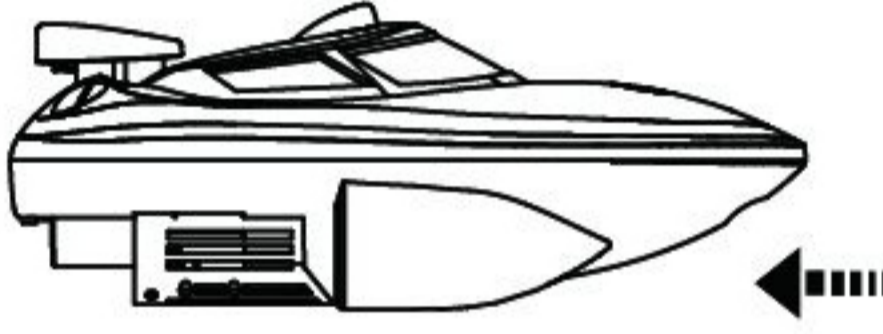












- ★ 禁止拆卸或重组电池;
- ★ 禁止短路电池;
- ★ 禁止在近火处或阳光照射下充电;
- ★ 禁止使用损坏或严重变形的电池;
- ★ 禁止使用尖端物插入电池或其他方式破坏电池;
- ★ 遵照充电要求使用指定的充电器对电池进行充电;
- ★ 只能用产品附带的充电器为产品充电;
- ★ 行驶完毕, 电池温度较高, 建议等待30分钟再给电池充电, 有效延长电池使用寿命;
- ★ 充电时, 人员切勿离开;
- ★ 不充电时, 请将充电器与充电口断开, 并断开电源;
- ★ 电池在使用或充电过程中一旦出现异味或其他异常现象, 请立即停止使用该电池;
- ★ 船在存放前, 需将电池充饱电再存放, 以免电池过分放电而损坏;
- ★ 如果您对电池充电流程没有把握请与本公司或经销商联系。

七. 特别提示

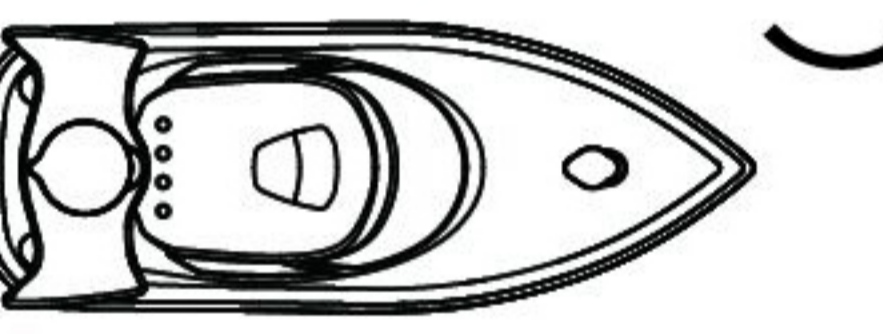低电压保护:

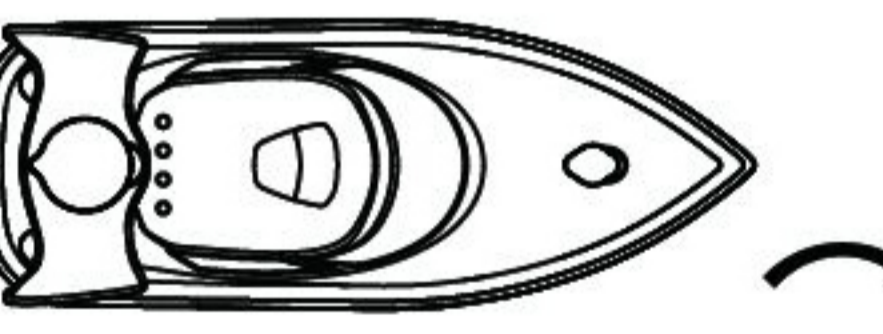
当诱饵船电池电量接近不足时, 诱饵船会在行驶过程中瞬间停止, 表示进入低电压保护状态, 此时遥控器会发出“嘀”“嘀”“嘀”的持续声音且绿灯闪亮。此时松开遥控器油门控制扳机至原始位置, 再扳动扳机控制诱饵船向岸边行驶 (诱饵船进入低电压保护后, 电池电量有限, 行驶速度缓慢, 为保证诱饵船可安全返航, 请立即向最近距离的岸边行驶)。

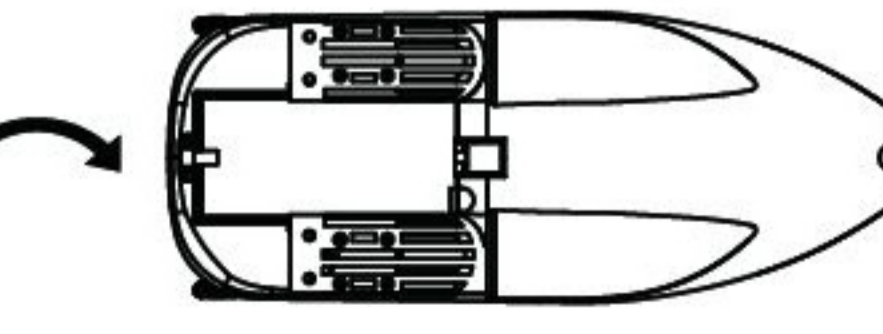八. 操作指引

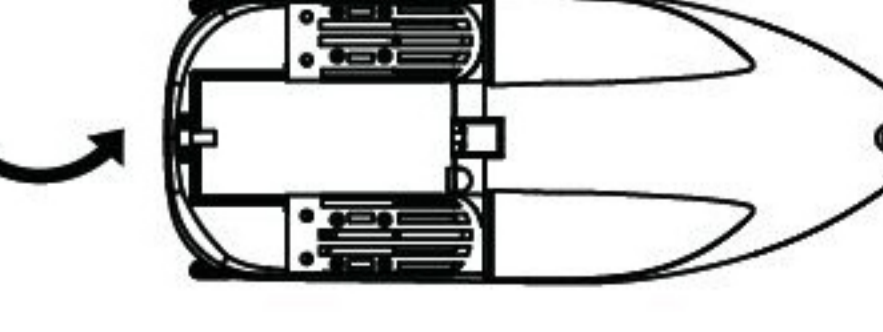 <p>前进</p>	<p>遥控器扳机缓慢向后扳, 左螺旋桨顺时针旋转, 右螺旋桨逆时针旋转, 使诱饵船向前行驶; 随扳动角度变大, 速度逐渐增快。</p>		
 <p>后退</p>	<p>遥控器扳机缓慢向前推, 左螺旋桨逆时针旋转, 右螺旋桨顺时针旋转, 使诱饵船向后行驶; 随扳动角度变大, 速度逐渐增快。</p>		
 <p>左转</p>	<p>诱饵船在前进的过程中, 同时将遥控器的方向盘逆时针旋转, 使诱饵船向左转弯, 随着方向盘的转动角度增大, 诱饵船转弯半径变小。</p>		
 <p>右转</p>	<p>诱饵船在前进的过程中, 同时将遥控器的方向盘顺时针旋转, 使诱饵船向右转弯, 随着方向盘的转动角度增大, 诱饵船转弯半径变小。</p>		
 <p>开启打窝仓</p>	<p>按一下遥控器左边料仓打开按键, 料仓伴随着快速的滴...滴...声顺时针旋转, 此时船体上的绿灯和遥控器面板上的红灯快速闪烁, 表示料仓处于全部打开状态, 说明已完成投料打窝全部动作, 可以操作诱饵船返回。</p>		
 <p>关闭打窝仓</p>	<p>按一下遥控器右边料仓关闭按键, 料仓伴随着快速的滴...滴...声逆时针旋转, 旋转至设定位置时滴...滴...声停止, 料仓自动停止旋转, 此时船体上的绿灯和遥控器面板上的红色灯由闪烁变为常亮, 说明料仓已完全处于关闭状态。</p>		


微调使用：

1. 使用前, 先将油门和转向微调调至居中位置。
2. 如果您是新手可以调整油门微调, 向左旋转为减速, 向右旋转为加速, 选择适合的速度进行自由操控。
3. 诱饵船直线行驶过程中, 如向左偏, 可将转向微调慢慢向右旋转; 如向右偏, 可将转向微调慢慢向左旋转, 直到诱饵船可以保持直线行驶。

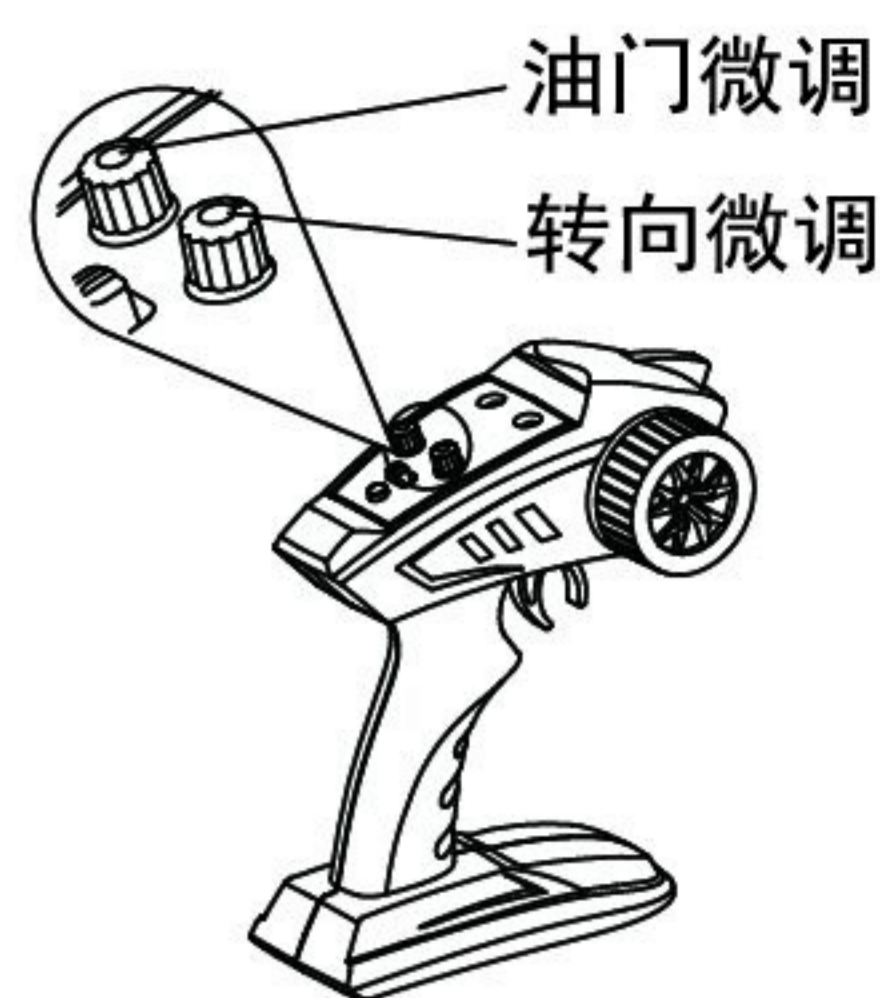

九. 更换螺旋桨

如果意外发生螺旋桨损坏, 您需一只手按住螺旋桨不使其转动, 另一只手使用由厂家配送的六角扳手套住六角螺母逆时针旋转将螺母拧下, 取下损坏的螺旋桨换上备用的螺旋桨, 将螺母按顺时针方向拧紧即可。

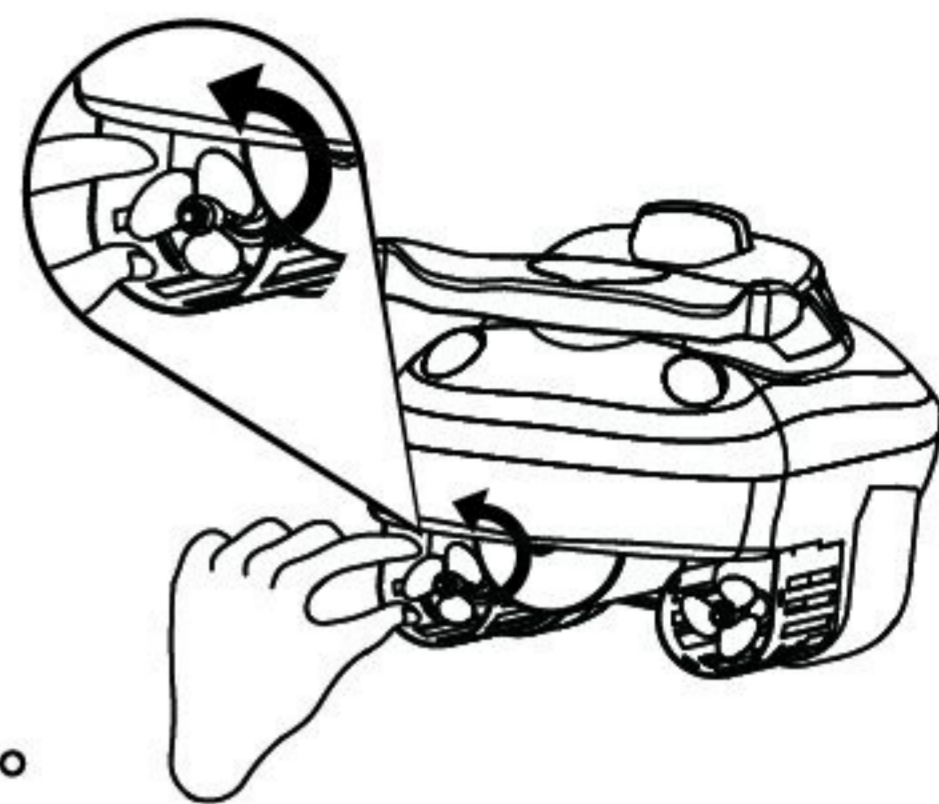

警告

- ★ 请遵照说明书或包装说明要求正确安装和使用, 部分零件由成人组装, 产品需在成人监护下使用。
- ★ 产品含有小零件, 可能产生误食或窒息的危险。
- ★ 请及时将包装材料收起, 以免对儿童造成意外伤害。
- ★ 彩盒上的保护膜, 仅用于运输和保护彩盒之用, 销售和使用前请自行去掉, 且妥善处理, 勿让儿童接触。
- ★ 请与高速旋转的螺旋桨保持安全距离, 以免发生绞伤危险。
- ★ 电池/电机为发热部件, 请勿触摸, 以免发生烫伤危险。
- ★ 无线电遥控模型警示说明: ①为保证航空无线电台(站)电磁环境的要求, 禁止在以机场跑道的中心点为圆心, 半径5000米的区域内使用各类模型遥控器。②在国家有关部门发布无线电管制命令的期间、区域区, 应按要求停止使用模型遥控器。
- ★ 激光辐射, 勿直视光束。
- ★ 严禁在深水中玩耍, 以免造成意外。
- ★ 模型只能连接到 II 类电器安全设备。
- ★ 产品需按说明书的要求完全安装好后才能在水中使用。
- ★ 本产品非救生用品。
- ★ 充电器、电池盒、电池需插入与产品标志相同的指定电源中。
- ★ 只能使用原厂配置的充电器。
- ★ 充电器不是玩具。
- ★ 非充电电池不可充电。
- ★ 给电池充电时, 需成人监护。
- ★ 不可混用新旧或不同类型的电池。
- ★ 用尽的电池应及时取出。
- ★ 长时间不使用请取出电池。
- ★ 清洁产品前应与充电器断开。
- ★ 需定期检查充电器、电线、插头、外壳和其他部件, 发现有损坏时立即停止使用, 直至修复完好。
- ★ 安装或更换电池应以正确的极性装入。
- ★ 接线端子不应短路。
- ★ 遥控器使用 1.5V*4 节“AA”电池, 诱饵船使用 7.4V 锂电充电电池组。
- ★ 切勿将电池短路、分解或投入火中。
- ★ 本包装及说明书含有产品重要信息, 请予以保留。

! 注意

温馨提示

1. 行驶结束, 先将船从水中拿起后关闭电源开关, 再将遥控器电源关闭, 否则会收到其他信号干扰而失控。
2. 船体是密封结构, 行驶结束后, 请将船头底部的散热口打开, 使其内部热量能够散发出来。

保养

1. 产品表面避免阳光长时间暴晒, 沾染的油污要用中性洗洁精加清水清洗干净。
2. 使用后请将本产品清洁干净, 确保本产品无水分和污渍。
3. 存放前必须将锂电池充满电存放并将遥控器内电池取出, 避免电池漏液损坏遥控器。

使用注意事项

1. 本产品请按照此说明书进行操作。
2. 本产品仅适用于14岁及以上人群使用。
3. 不要在水草和杂物较多的水面使用, 杂物可能会将诱饵船的螺旋桨缠住, 致使诱饵船停航。
4. 禁止在游泳池或者有人游泳的水面航行, 以免伤人。
5. 诱饵船使用时请注意不要超出遥控范围, 以免诱饵船失控。

销售配件图

V003-01 锂电充电电池 	V003-02 遥控器 	V003-03 充电器 	V003-04 接收板盒 
V003-05 驱动电机组件 	V003-06 打窝电机组件 	V003-07 左螺旋桨组件 	V003-08 右螺旋桨组件 
V003-09 螺旋桨铜套 组件 	V003-10 左金属罩 	V003-11 右金属罩 	V003-12 透明料仓 
V003-13 充电盖硅胶塞 	V003-14 上盖外圈硅胶 	V003-15 散热口硅胶塞 	V003-16 扳手配件 



★ Please read the instruction manual carefully before using. The view of the instruction manual may be varied from the real item, it is subject to the real item inside the package.

Product parameter	Length	Width	Height	Frequency	Remote Control Distance	Using time	Fastest Speed	battery in the hull	Battery in the transmitter	Capacity of Feeding Compartment
	397mm	145mm	150mm	2. 4G	≥300m	2H	≥15KM/H	7. 4V Lithium battery	4x1. 5V AA (Not included)	300mL

PRODUCT CHARACTERISTICS

- 2.4G Auto-decoding technology is applied on this product with super-strong anti-interfering performance, which can realize more players to operate in the same time.
- Decoying Boat is equipped with ceiling light and rear light, which can also be used in the evening.
- Toddler: If the boat is knocked over during the course of using, the hull may turn over automatically due to gravity.
- Low Voltage Protection Function: When there is insufficient power with the Decoying Boat during the course of using, the transmitter may send out two alarming sounds of “di,” “di”; which makes sure the Decoying Boat can return to the shore effectively.
- The Decoying Boat is equipped with 540 dual motors, which make it more dynamic and powerful.
- 7.4V rechargeable lithium battery is applied on this Decoying Boat, which makes cruising more lasting and extends using life of the battery.
- The top of the hull has the function of Electricity Display. When switch on the power of the hull top, you can test the electricity volume of the hull in real time; Four blue lights keeps eternally “ON” represents that it is under the state of full power. One flashing light remained represents it is under the state of insufficient power. This time please charge it in time.
- The Decoying Boat has jamming protection function. When the propeller clips to the weeds or debris by accident, the hull will stop working for 15 seconds and then it can be operated normally. In this way it can help protect the motor and extend the using life of the circuit board.
- The transmitter is equipped with steering trimmer, which makes sure the Decoying Boat can be cruising in a straight line.
- The transmitter is equipped with Throttle Control Trimmer. When baiting, you can make baiting by cruising in slow speed. When not baiting, you can adjust it till fastest speed and you can play pleasantly.
- The transmitter is equipped with a power indicator. When the red light gets flashing slowly, it represents insufficient power. Please replace the batteries in time.
- When switching on the power of the transmitter, if there is no operation within 5 minutes, it will enter into sleeping state so as to save battery power. Under the state of sleeping, Plucking up either functional key can help activate it.

PLANE GRAPHICS OF THE PRODUCT

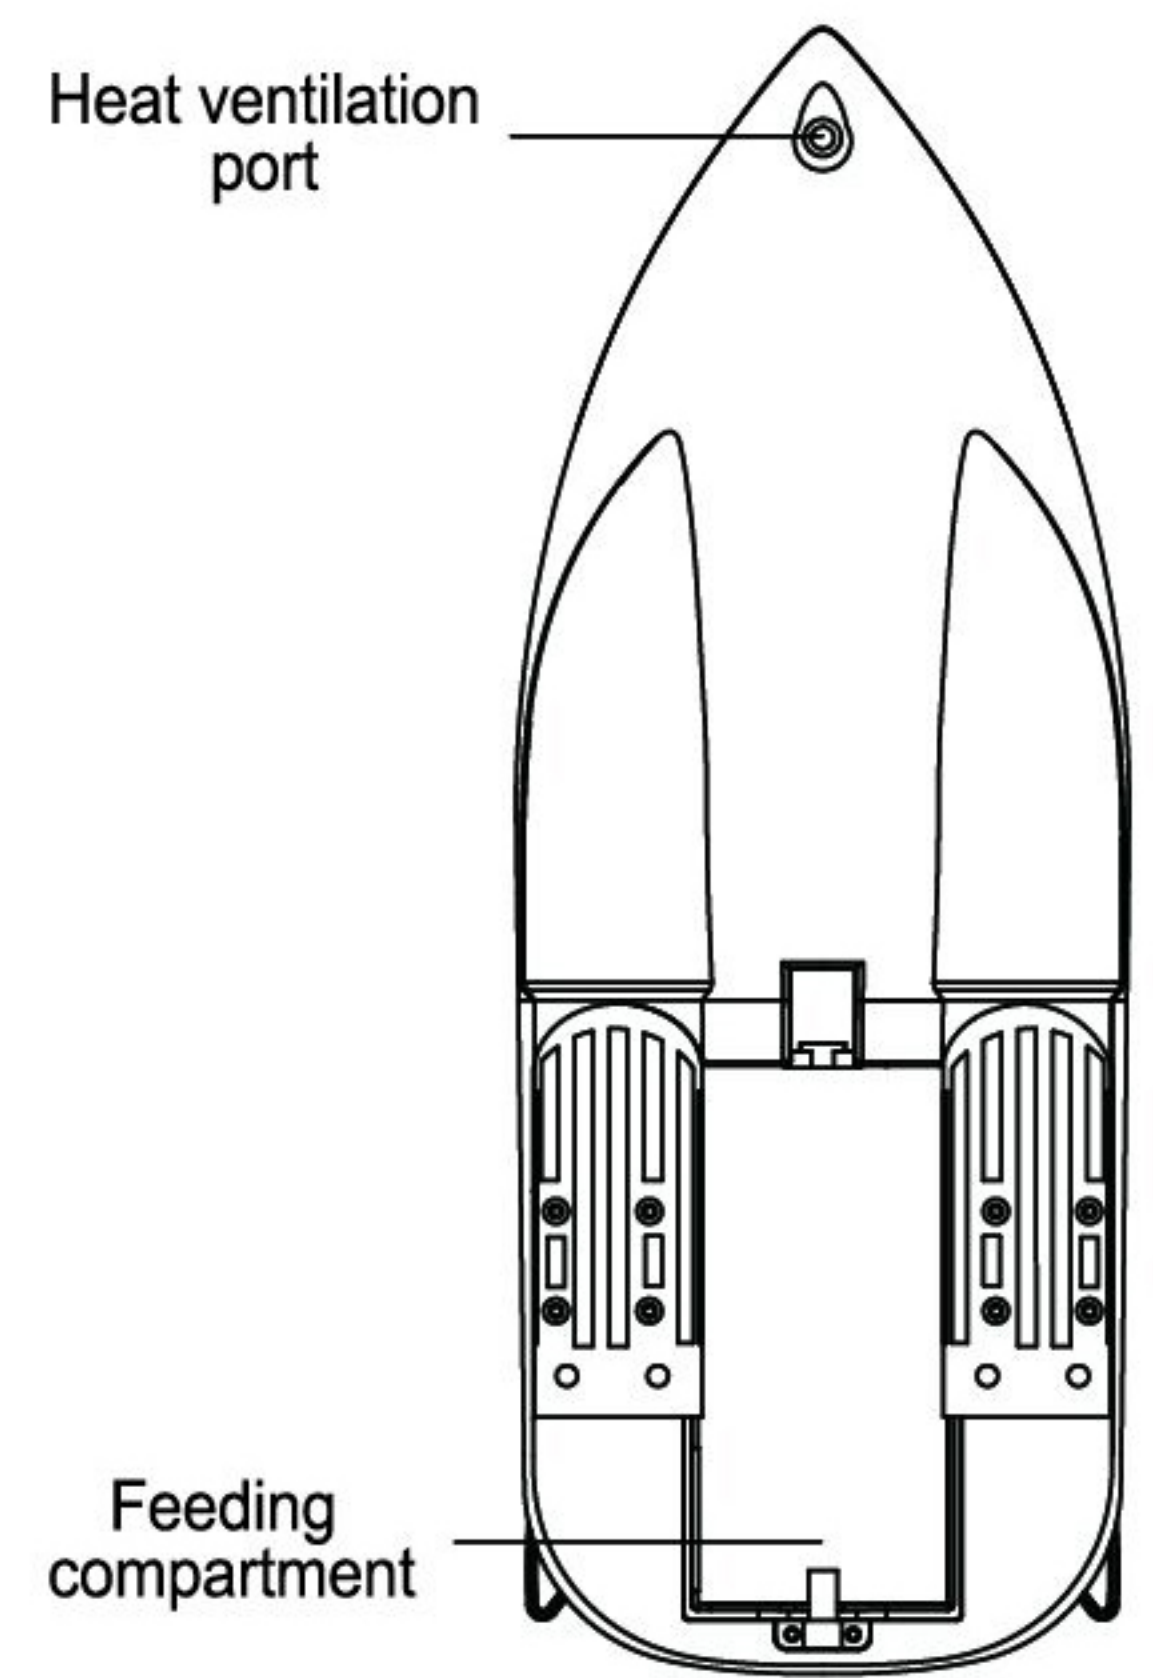
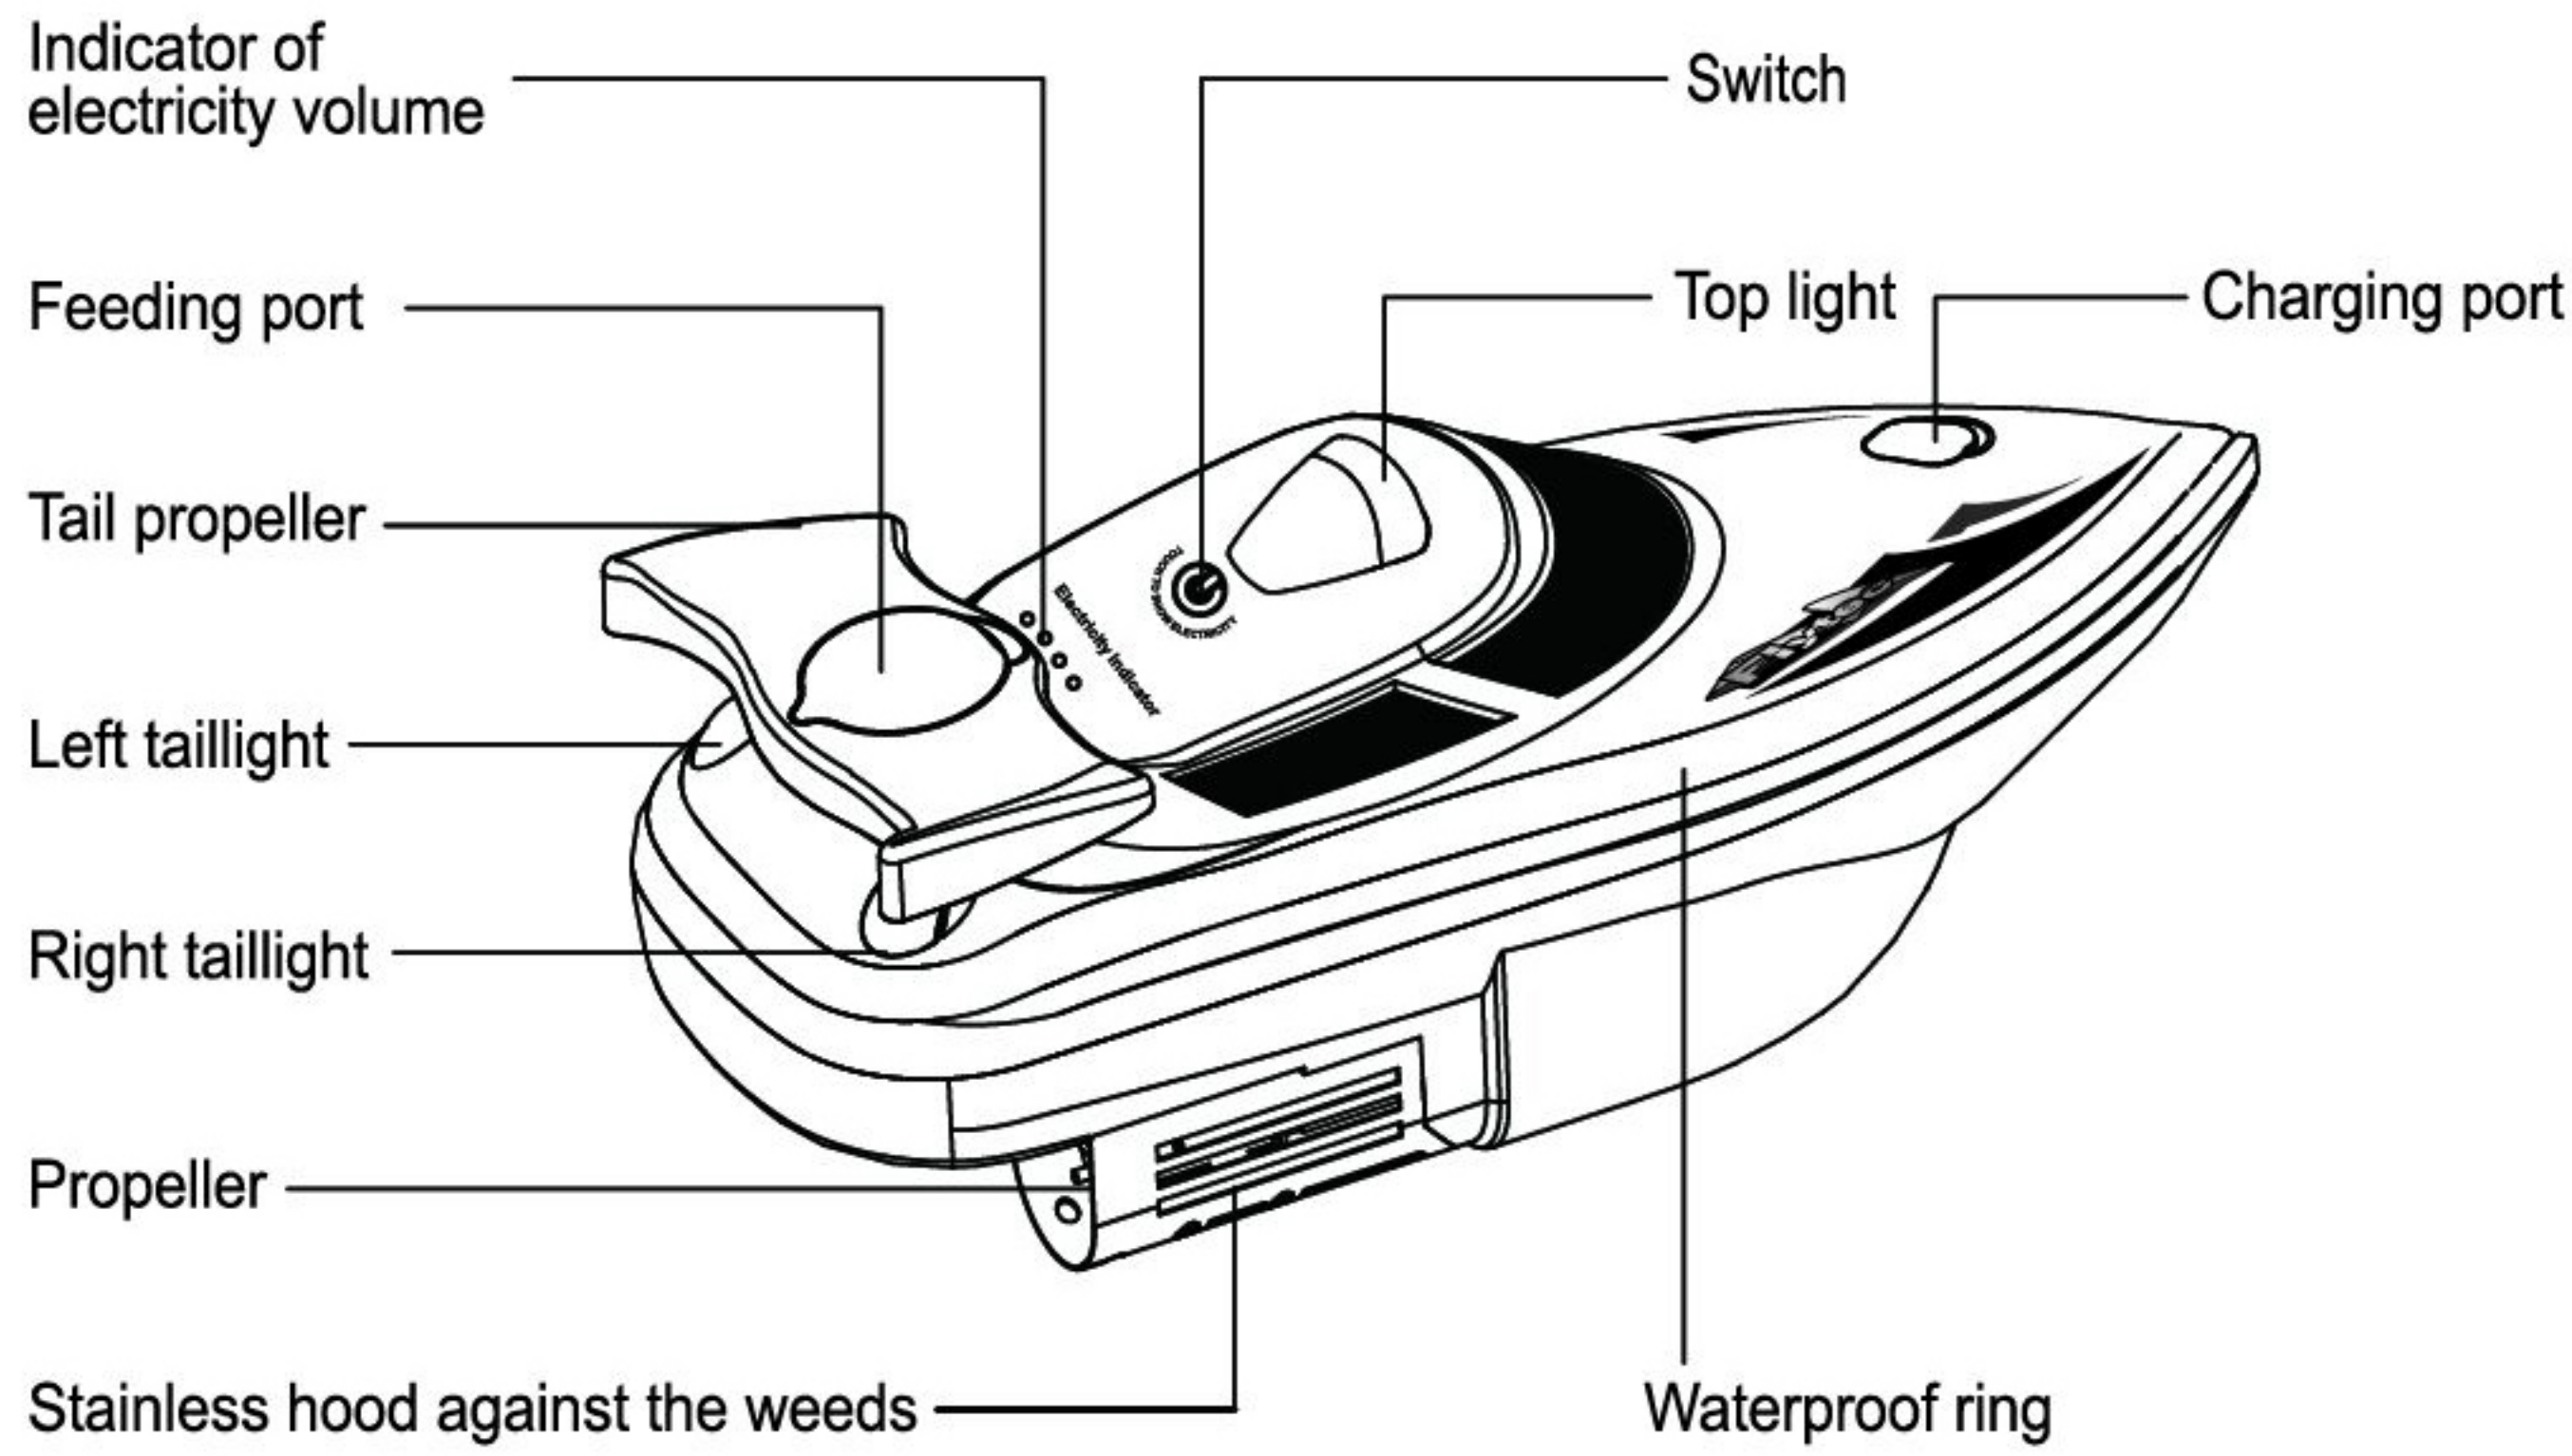


Illustration of the Decoying Boat Hull


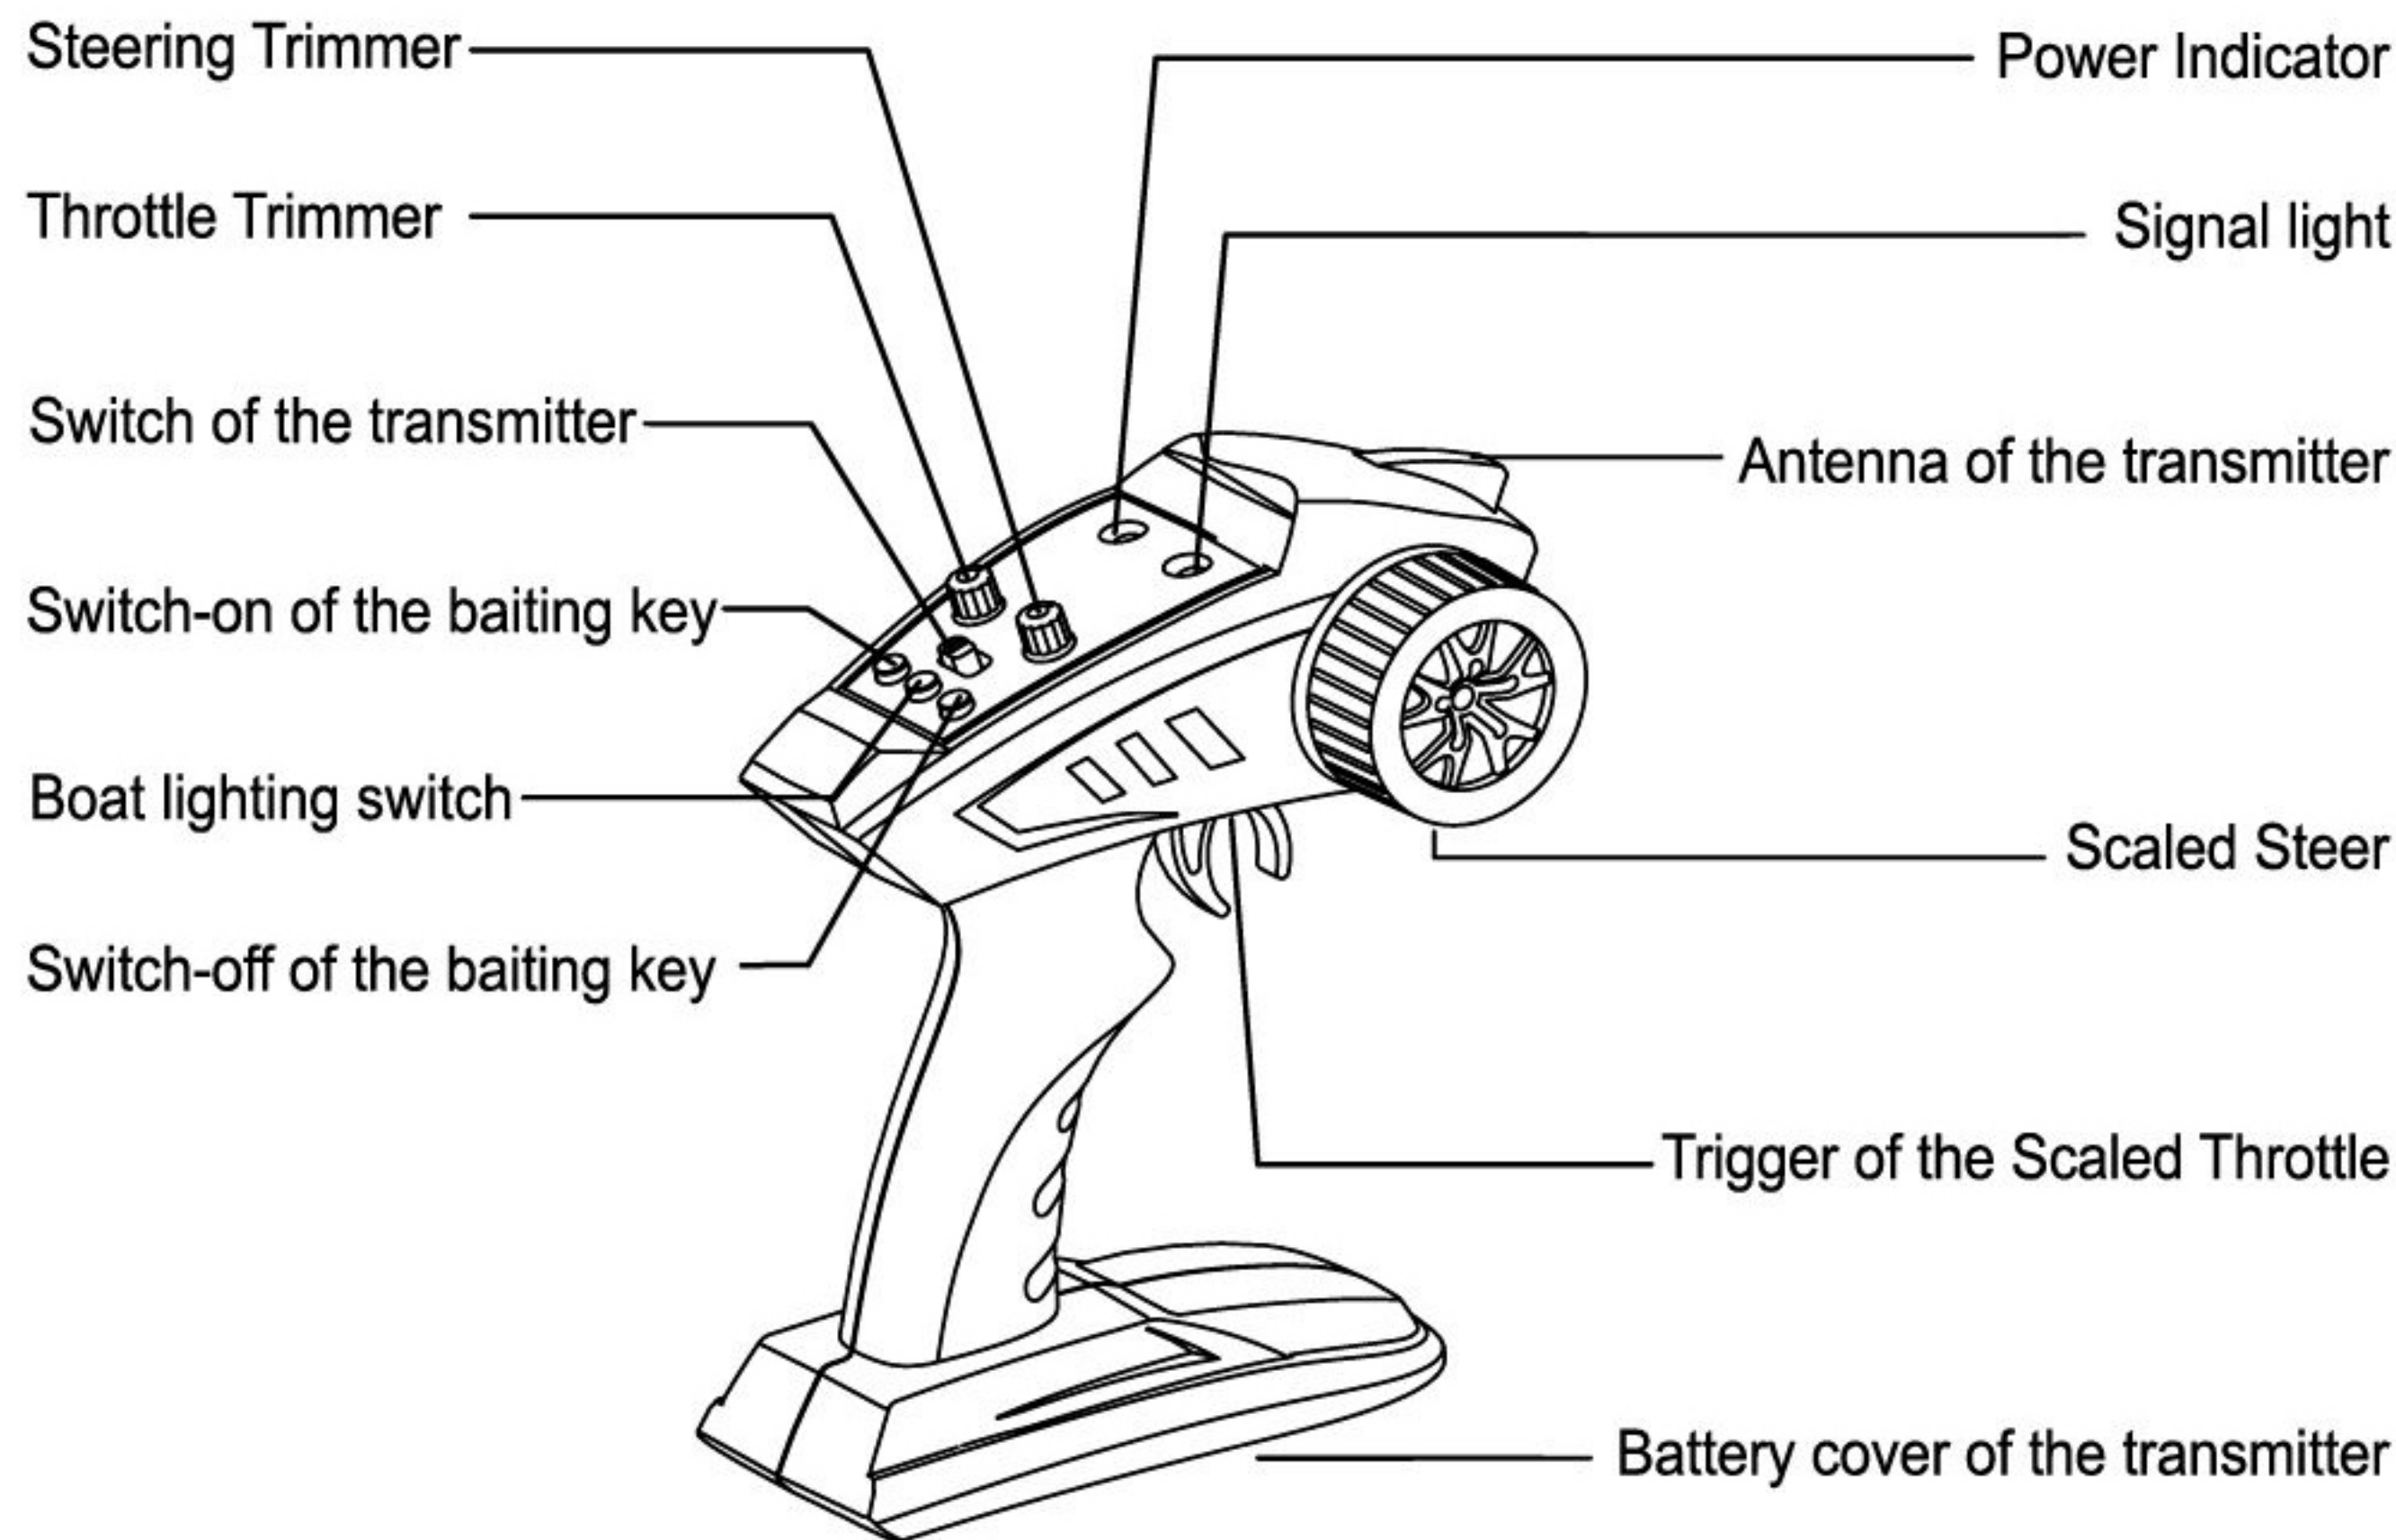



Illustration of the Decoying Boat controller

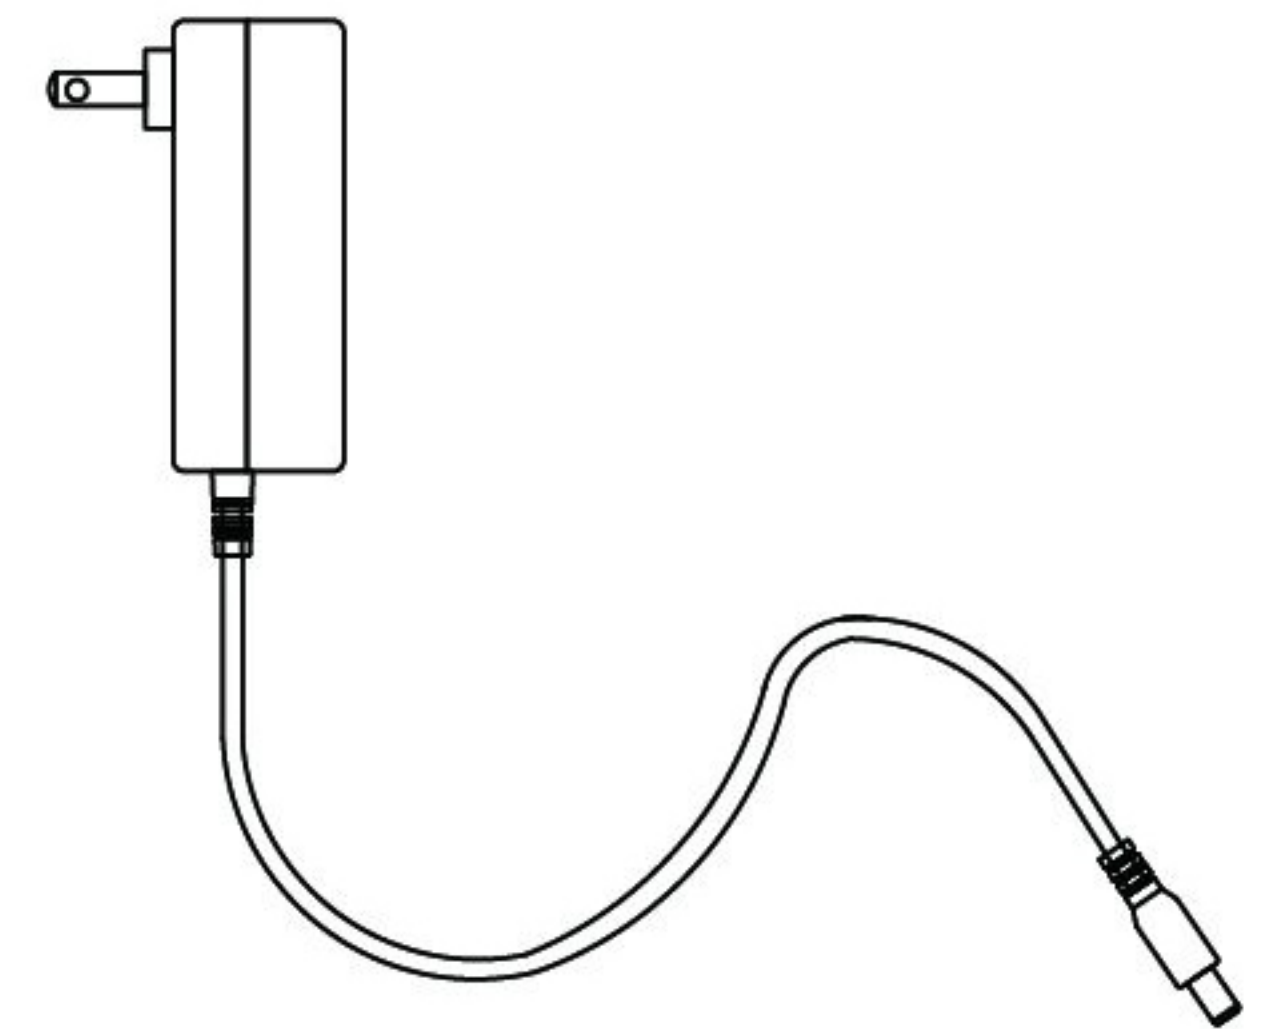

Charger

PREPARATION BEFORE PLAYING

1. As the picture shown, open the battery cover of the transmitter and then load 4PCS "AA" batteries correctly as per the "+" / "-" polarity sign of the battery compartment (batteries not included) and then close the battery cover.
2. Before switching on the transmitter, the speed control trigger and the steer should be kept under the original state. The steering trimmer should be kept in the neutral position (the concave point on the trimmer knob should be aimed to the neutral position of the trimmer which has the sticker covered on the transmitter.)
3. Please make sure that the rubber stopper of the charging port and the heat ventilation port at the base have been capped before using so as to avoid the seepage, which may cause damaged to the internal parts of the product.
4. Please make sure the feeding compartment be in the state of CLOSE and then fill the bait from the feeding port.

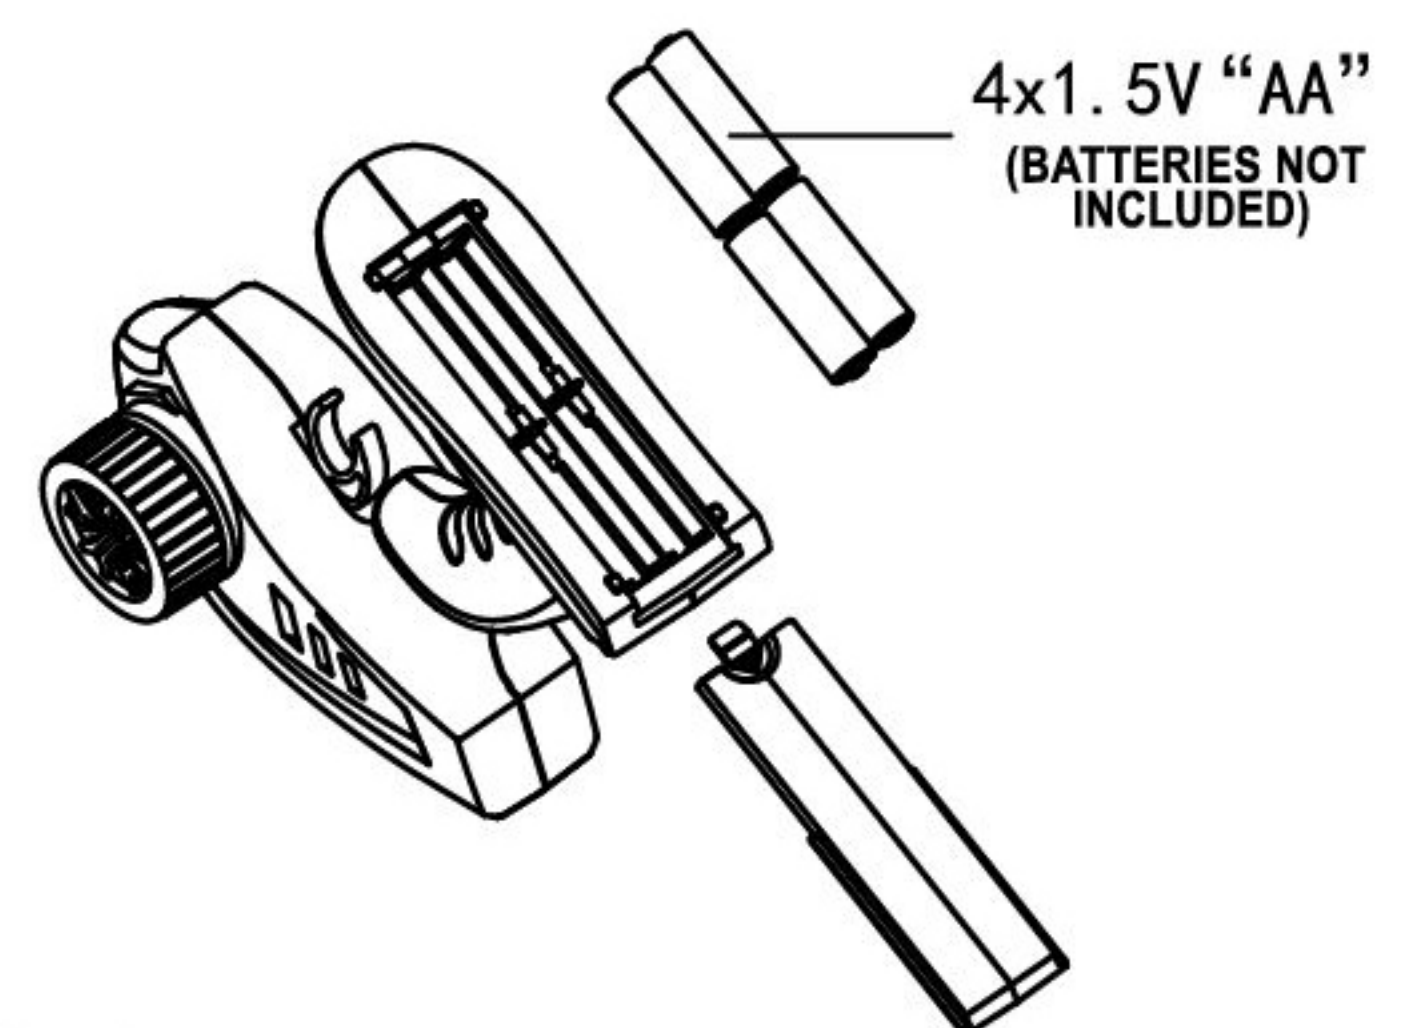


INSTRUCTION ON CRUISING ON THE WATER & DECODING

1. First of all ,please switch on the power of the transmitter, the green light of the transmitter will be flashing. Then you can switch on the power of the Decoying Yacht and the light on the hull will be flashing and the indicator of the electricity volume keeps eternal bright "ON". This time you will hear two times of beeping sound "Di, Di" sending out from the transmitter and the green light of the transmitter will turn from flashing into eternal bright "ON" and the top light of the hull and the tail light will show eternal bright "ON", which represents the decoding has been successfully finished. This time you can operate the Decoying Yacht freely for decoying.
2. When more Decoying Boats are used in the same time, you can not make decoding to them in the same time but make decoding one by one. Otherwise it may fail to make decoding or make wrong decoding. If it is not decoded correctly or in the case that the shift of the transmitter and the Decoying Boat, When you switch off the power of the hull and the transmitter, please restart this Decoying Yacht. Then keep pressing the Light Control key in the middle of the transmitter while switching on the power of the transmitter. When two sounds of "di", "di" is heard, the light of the transmitter and the hull will get eternally bright "ON", which represents the decoding has been successfully finished.


DESCRIPTION OF ANCILLARY FUNCTION (ROPING & TRAWLING)

1. Press the key of Feeding Compartment on the left of the transmitter and then put the wire end of the fishing net into the feeding compartment and then press the CLOSE key of the feeding compartment on the right of the transmitter and close the feeding compartment (As picture A shown below);
2. Pull the trigger of the transmitter backward and the hull will be cruising forward, the hull will race forward while releasing the fishing net (please well sort out the fishing net before going into the water so as to avoid entanglement during the course of fishing net releasing.) (As the Picture B shown);
3. After dragging the fishing net to the destination, please press the Open key of the Feeding Compartment on the left of the transmitter and you can conduct baiting from a farther distance. Please do avoid the fishing net when cruising back so as to avoid the propeller being entangled.(As the picture C shown below)


Picture A

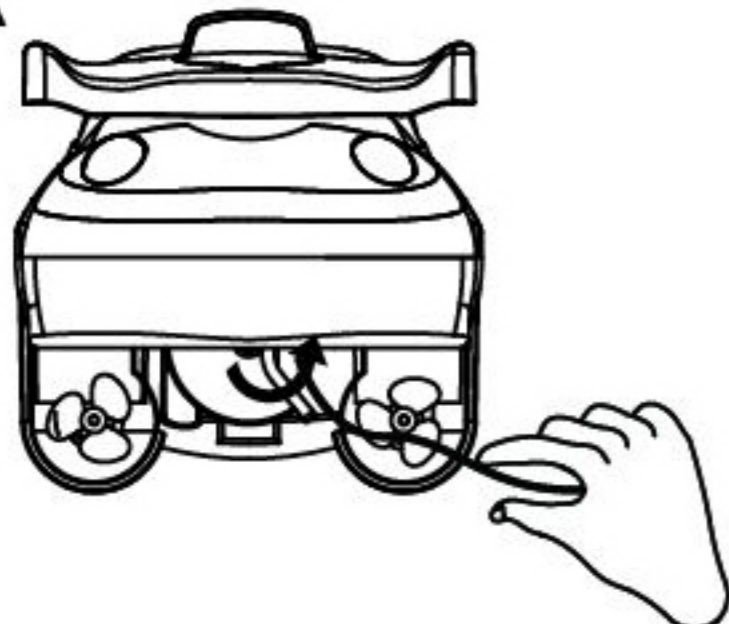

Picture B

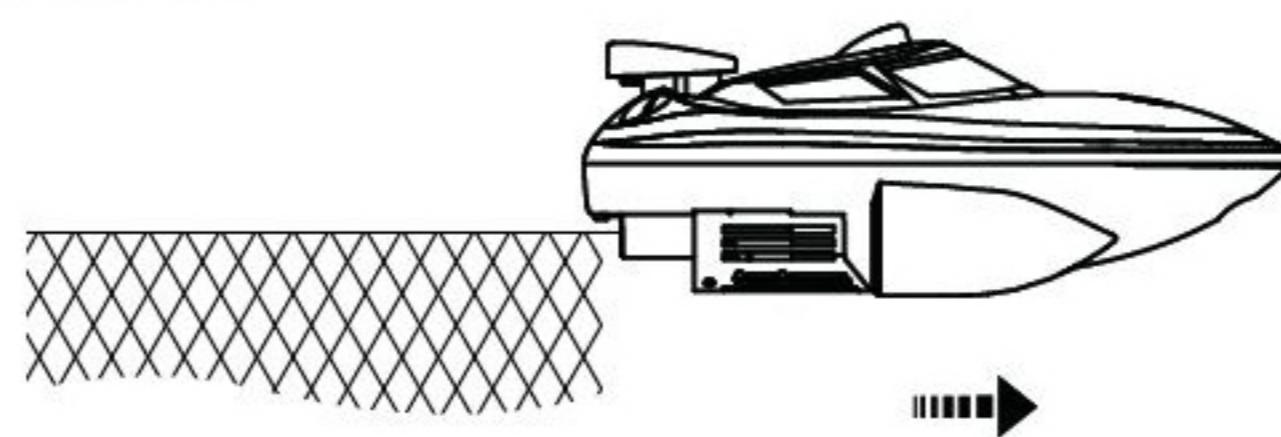


Picture C

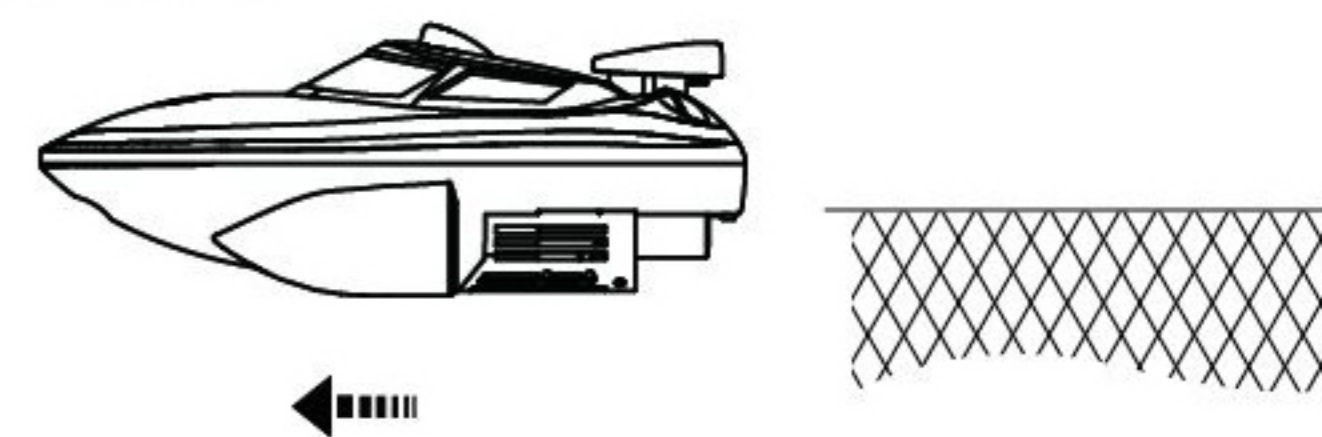

BATTERY CHARGING

As the picture shown, please insert the round plug into the charging port of the hull and then insert the charger into the power socket. This time the red light of the charger will be "ON" and the power indicator of the hull will take turn flashing. The charging time is about 6 to 7 hours. When the yellow light of the charger is "ON" and the power indicators of the hull are all bright "ON", which represents the charging has been finished. Please disconnect all the links.(As the picture shown on the right)

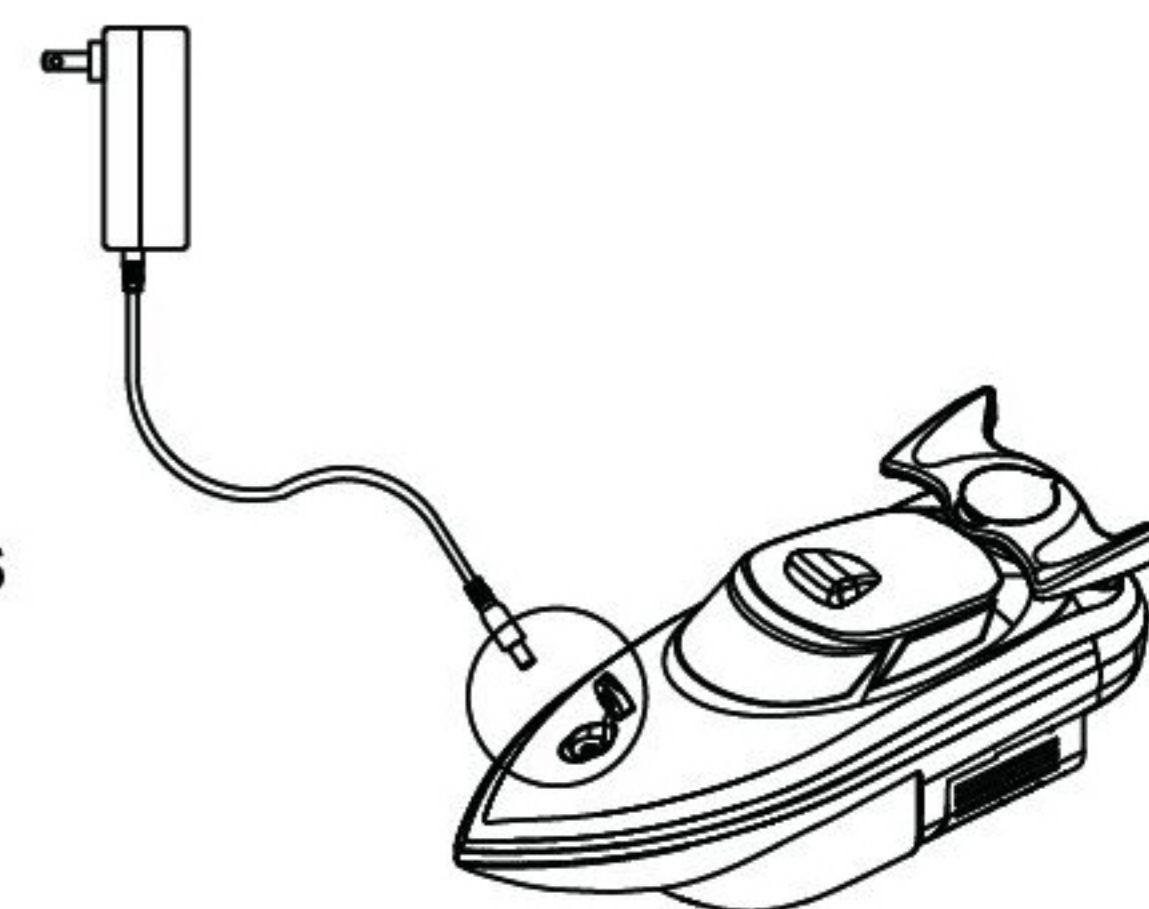

! CAUTION!

- Disassembling or restructuring the batteries is highly PROHIBITED.
- Short-circuit is highly PROHIBITED.
- It is highly FORBIDDEN to charge near the fire or under the sunlight.
- It is highly FORBIDDEN to use batteries that is damaged or seriously deformed.
- It is highly FORBIDDEN to insert the object with sharp edge into the batteries or damage the battery in other way.
- Please use the charger designated to charge the battery by following the charging requirement.
- Only charger included can be used for charging this product.
- When finish cruising, the temperature of the battery will be very high. It is highly recommended that you wait for 30 minutes before charging the battery so as to effectively extend the using life of the battery.
- Please DO NOT leave when the battery is being charged.
- When it is not charged, please disconnect the charger from the charging port and switch off the power.
- If there is any odor or other abnormal phenomena during the use or charging of the battery, please stop using the battery immediately.
- Batteries should be fully charged before storing so as to avoid excessive discharge of batteries, which may cause the batteries damaged.
- If you are not sure about the process of charging the battery, please do not hesitate to reach our company or distributor for the details.















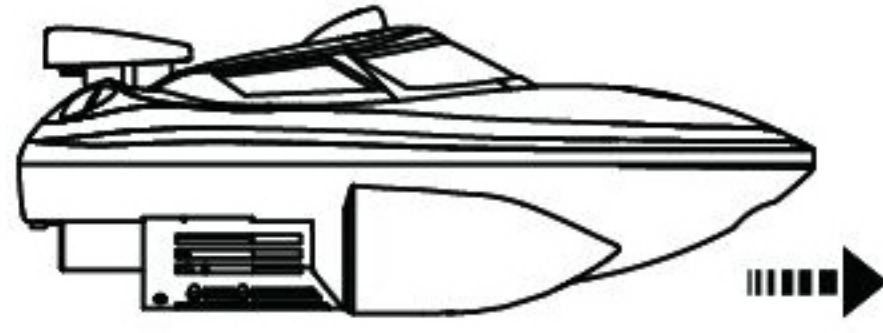



SPECIAL TIPS

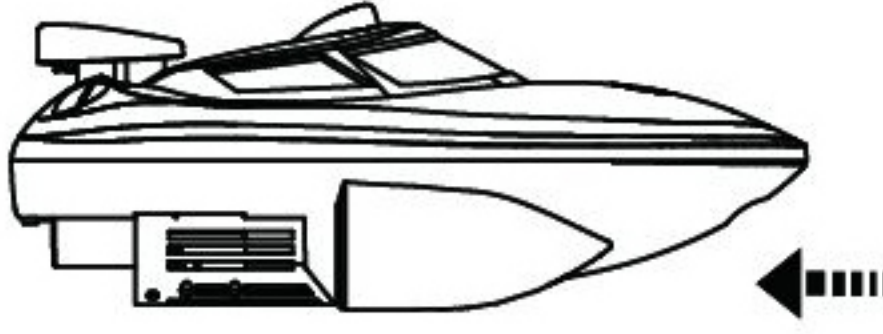LOW VOLTAGE PROTECTION:

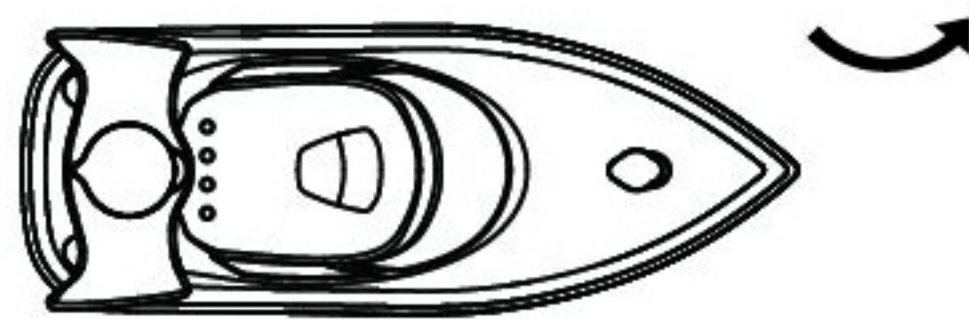When the battery power of the Decoying Boat is insufficient or near exhaustion, the Decoying Boat will stop instantly during the course of driving, which represents that it will enter into the state of a low voltage protection. At this time, the transmitter will send out a continuous sound of "di", "di" "di" and the green light will keep flashing. This time, please release the trigger of the throttle of the transmitter to the original position and then pull the trigger to control the Decoying Boat to drive toward the shore (When the Decoying Boat entering into the state of low voltage protection, there is very few power left and driving speed keeps very slow).

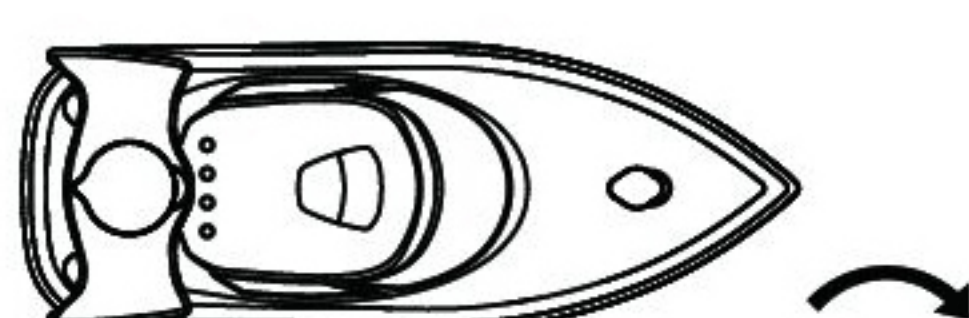
In order to make sure the Decoying Boat can safely return to the shore, please drive it to the nearest shore immediately).

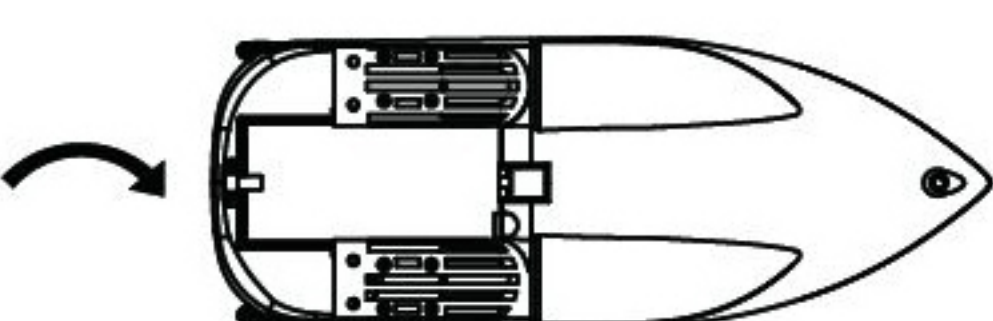OPERATING GUIDANCE

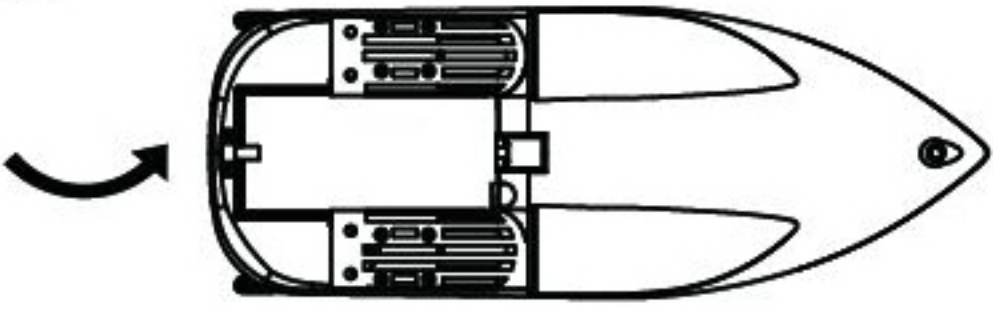 <p>FORWARD</p>	<p>Pull the trigger of the transmitter backward slowly, the left propeller will be rotating in clockwise direction and the right propeller will be rotating in anti-clockwise direction, which makes the Decoying Boat race forward; With the bigger of the triggering angle, the speed will be increasing gradually.</p>  
 <p>BACKWARD</p>	<p>Push the trigger of the transmitter forward slowly, the left propeller will be rotating in anti-clockwise direction and the right propeller will be rotating in clockwise direction, which makes the Decoying Boat race backward. With the bigger of the triggering angle, the speed will be increasing gradually.</p>  
 <p>TURN-LEFT</p>	<p>During the process of the Decoying Boat advancing forward, rotate the steer of the transmitter in anti-clockwise direction in the same time, the Decoying Boat will turn left. With the bigger of the rotating angle, the turning radius of the Decoying Boat will get smaller.</p>  
 <p>TURN-RIGHT</p>	<p>During the process of the Decoying Boat advancing forward, rotate the steer of the transmitter in clockwise direction in the same time, the Decoying Boat will turn right. With the bigger of the rotating angle, the turning radius of the Decoying Boat will get smaller.</p>  
 <p>OPEN THE BAITING COMPARTMENT</p>	<p>Press the Open key of the feeding compartment on the left of the transmitter. With the quick sound of "Di, Di", the feeding compartment will be rotating in clockwise direction. This time the green light of the hull and the red light on the panel of the transmitter will be flashing quickly, which represents the feeding compartment is under the state of All Open and indicating all the feeding and baiting actions are all finished and you can control the Decoying Boat to return.</p>  
 <p>CLOSE OF THE BAITING COMPARTMENT</p>	<p>Press the Close key of the feeding compartment on the right of the transmitter, with the quick rotating sound of "Di, Di", the feeding compartment will be rotating in anti-clockwise direction. Rotating to the position not be located, the "di, di" sound will stop and this time the feeding compartment will stop rotating automatically. This time the green light of the hull and the red light on the panel of the transmitter will turn from flashing into eternal bright "ON", which represents the feeding compartment has been completely under the state of the Close.</p>  


TRIMMING INSTRUCTION:

1. Before using, please trim the throttle and steering trimmer to the neutral position.
2. If you are a beginner, you can adjust the throttle trimming, turn the trimmer knob to the left for decelerating, turn the trimmer knob to the right for accelerating. Please choose the right speed to operate freely.
3. During the course of the Decoying Boat racing in a straight line, if it deviates to the left, please rotate the trimmer slowly to the right. If it deviates to the right, please rotate the trimmer slowly to the left until the Decoying Boat can keep racing in a straight line.

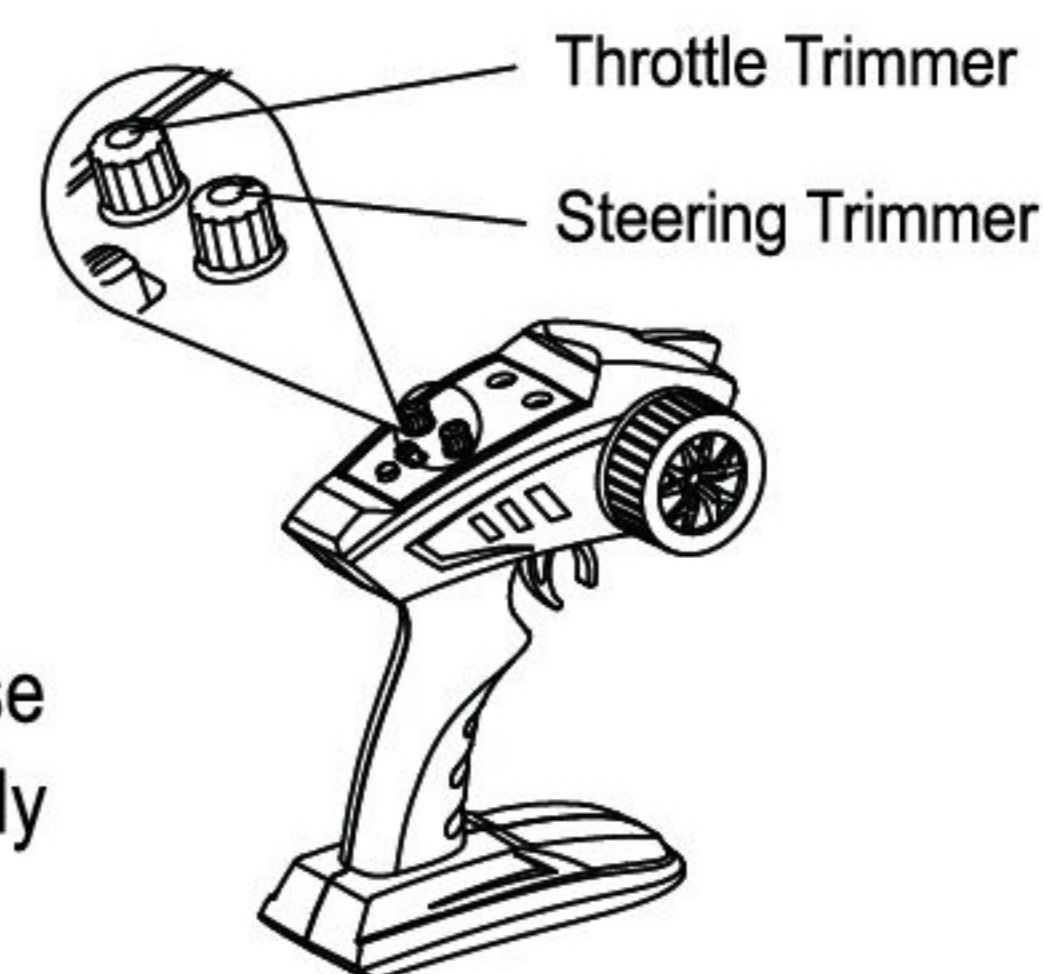

REPLACEMENT OF PROPELLERS

If the propeller is damaged by accident, you need to hold the propeller by one hand and keep it from turning. Use the hexagonal wrench by the other hand to hold the hexagonal nut and then unscrew it in anti-clockwise direction. Remove the damaged propeller and replace it with the spare propeller and then simply wrench it tightly in clockwise direction.

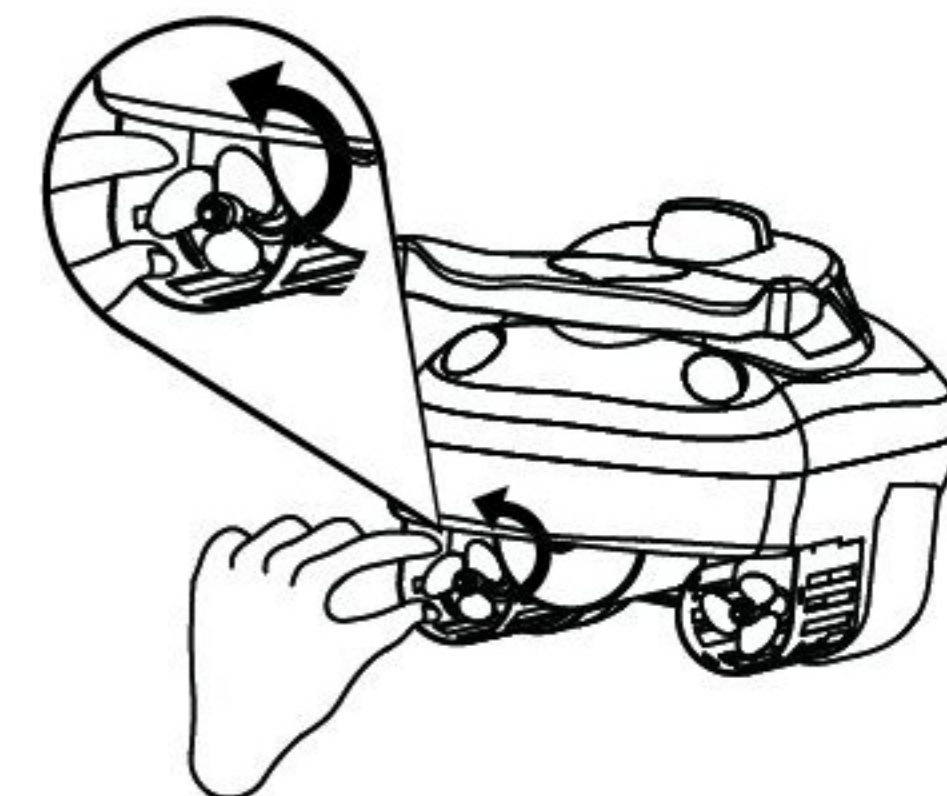

⚠ CAUTION!

- Please correctly assemble and use this product by following the instruction manual or packing requirement. Some of the parts are assembled by the adult. This product is to be used under the surveillance of the adult.
- Small parts are contained in this product and it may cause **CHOKING HAZARD**.
- Please collect the packing material in time so as to avoid the children being injured by accident.
- The protective film on the color box is only used for the purpose of transportation and protection of the color box. Please remove it by yourself before sale and using. Please well dispose it or place it beyond the reach of the children.
- Keep a safe distance from the high-speed rotating propeller so as to avoid the danger of strangulation.
- Batteries/motors are heating components. Please **DO NOT** touch them so as to avoid the danger of being ironed or scalded.
- Warning instruction of the Radio **Control model: (1)** In order to make sure that it can conform to the electromagnetic environment requirements of the aviation radio stations, it is highly **PROHIBITED** to use various models of transmitter within the area of radius of 5000 meters taking the center point of the airport runway as the center of the circle. **(2)** During the period of publishing the radio control regulation and command, please do stop using transmitter of this model immediately.
- Laser radiation, Please **DO NOT** see the direct sunlight.
- Playing in the deep water is highly **FORBIDDEN** so as to avoid accident.
- This model can only be connected with the safe equipment, such as the electric appliance with class II.
- This product should be fully assembled in accordance with the instruction manual before it can be used in the water.
- This product is not a life saving product.
- The charger, battery compartment and battery are to be inserted into the designated power supply with the same product logo.
- Only original charger included in this product can be used.
- Charger is **NOT** a toy.
- Non-chargeable batteries are NOT to be recharged.
- When charging the battery, batteries should be charged under the guardianship of the adult.
- Old batteries are **NOT** to be mixed with the new ones. Batteries of different types or brands are **NOT** to be used.
- Please timely remove the exhausted batteries.
- Please remove the batteries when it is not used.
- Please **DO** disconnect it from the charger before cleaning this product.
- The charger, wires, plugs, housing and other parts should be inspected regularly. If damaged, please stop using it immediately until it is well repaired.
- Please load or replace the batteries as per correct “+”/”-” polarity.
- Connecting wire ends are **NOT** to be short-circuited.
- **4PCS 1.5V “AA”** batteries are required in this transmitter.
- 7.4V rechargeable lithium battery pack is required in this Decoying Boat.
- Please **DO NOT** make the battery short-circuited or decompose or throw the battery into the fire.
- Important information is contained in the instruction and this package, please well keep it for future reference.

! CAUTION!

WARM TIPS:

1. When finish racing, please Take the Decoying Yacht from the water and then switch off the power, and then switch off the power of the transmitter.. Otherwise it may be out of control if it is interfered by other signal.
2. The hull is sealed in structure. When finish cruising, please open the heat ventilation port at the base of the boat head, which helps send out the heat inside.
















MAINTENANCE:

1. Product surface should avoid being exposed outside for a longer time. Contaminated oil or dirt are to be cleaned by using the neutral detergent added with clear water.
2. Please clean this product after using so as to make sure no moisture or dirt are contained in this product.
3. Before storage, lithium batteries should be fully charged and the batteries in the transmitter should be removed so as to avoid battery leakage, which may cause damaged to the transmitter.

PRECAUTION:

1. Please operate this product by following this instruction manual.
2. This product is suitable to be used by the players on or more than 14 years old.
3. Please **DO NOT** use this product on the water surface where there are more weeds or debris as the debris may entangle the propeller of the Decoying Boat, which cause the Decoying Boat anchored.
4. It is highly forbidden to navigate it in the swimming pool or on the water where there is people swimming so as not to cause wounded.
5. When using the Decoying Boat, please do pay more attention not to exceeding the controlling scope so as to avoid the Decoying Boat out of control.

PICTURE OF PARTS

V003-01 lithium-ion rechargeable battery 	V003-02 Transmitter 	V003-03 Charger 	V003-04 Receiving Box 
V003-05 Driving Motor Component 	V003-06 Motor assembly for baiting 	V003-07 Left Propeller Module 	V003-08 Right Propeller Module 
V003-09 Propeller Copper Sleeve Assembly 	V003-10 Left Metal Cover 	V003-11 Right Metal Cover 	V003-12 Transparent Feeding Compartment 
V003-13 Silicone rubber stopper 	V003-14 Outer ring silica of upper cover 	V003-15 Silicone rubber stopper 	V003-16 Spanner Accessories 