

GPS Smart Remote Control Fishing Bait Boat


V010




Instruction Manual

“FISH” IS A LIFE OF MY LIFE

Product Function

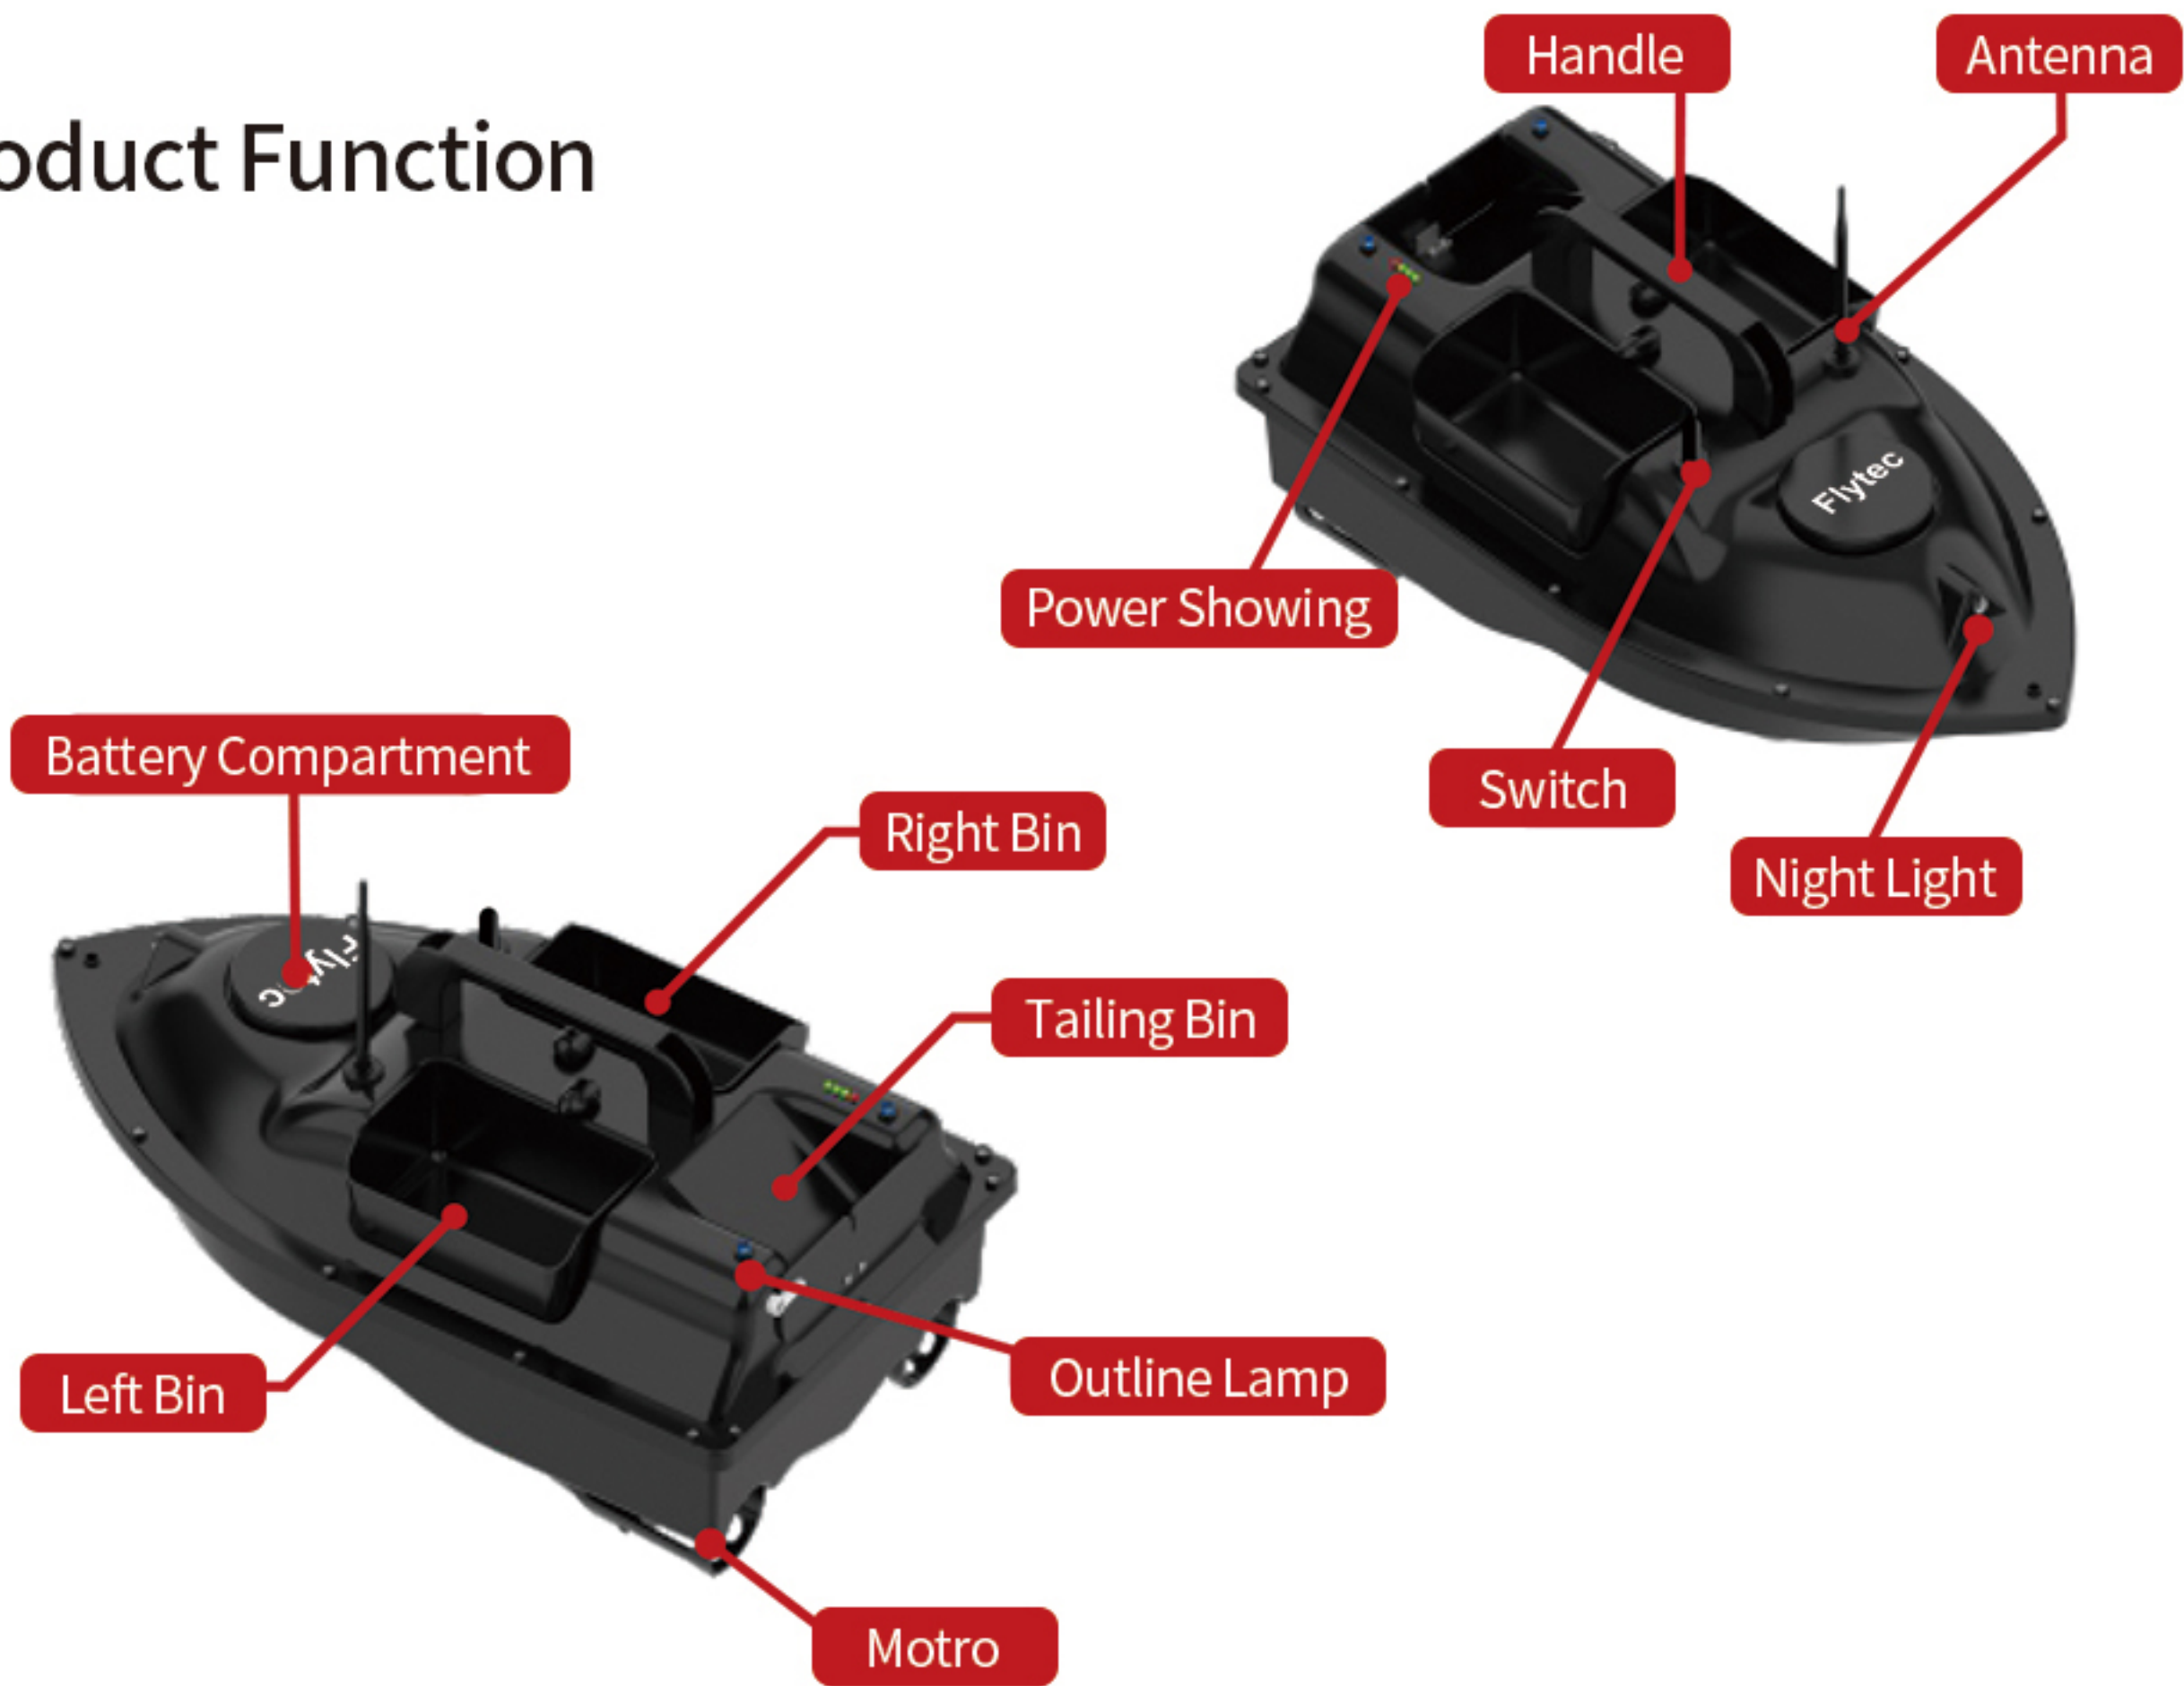

Remote Control Function Descripton

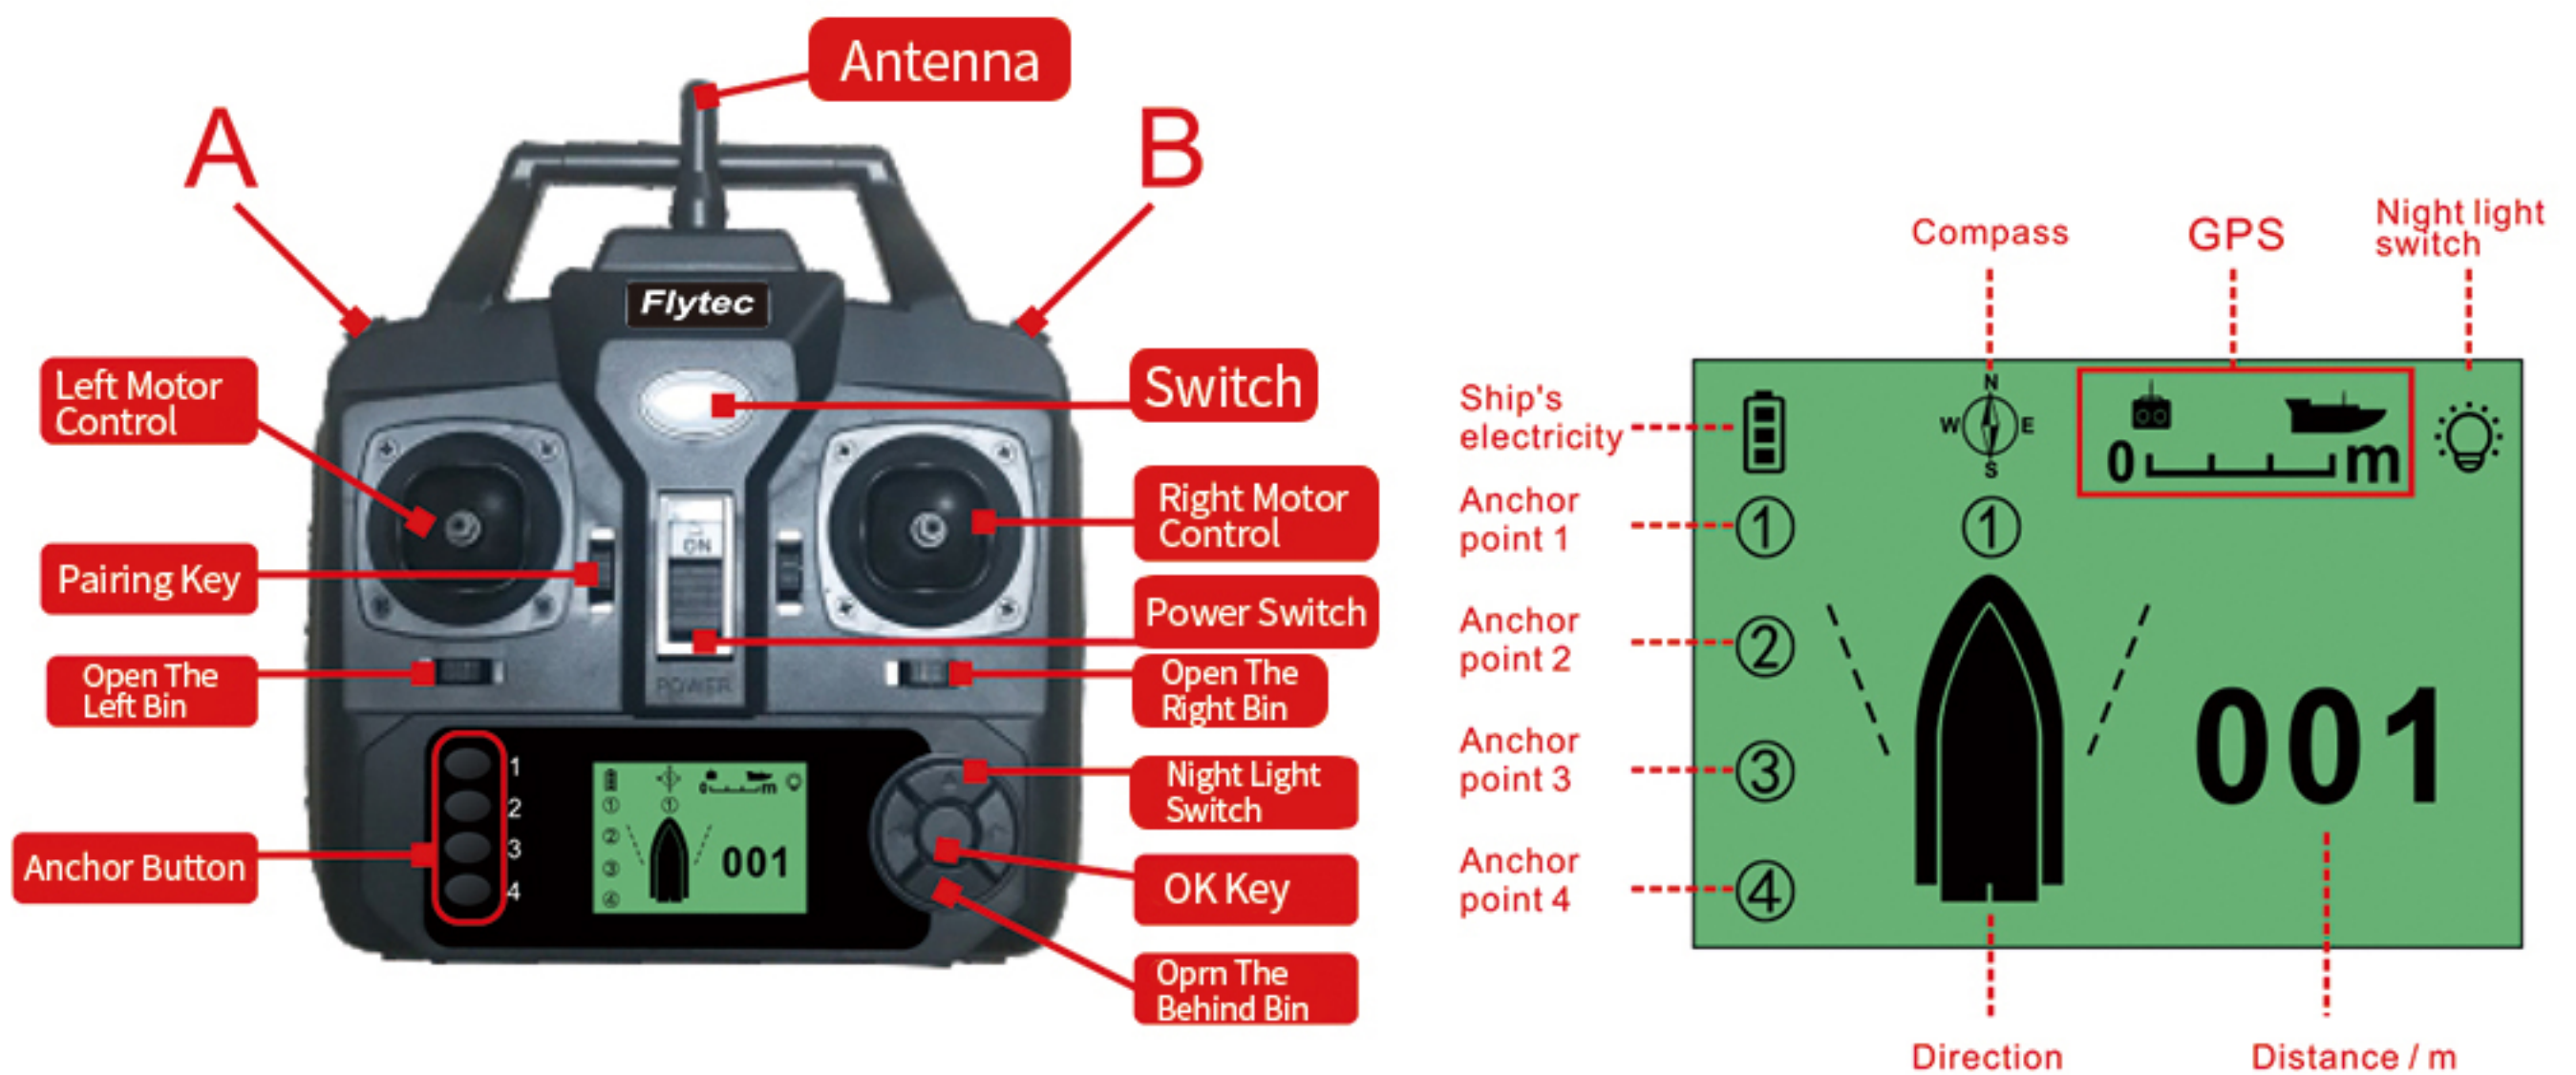

“FISH” IS A LIFE OF MY LIFE

Power On

1. Place the boat on a flat road and turn on the power switch until the light on the boat is always on
2. Turn on the power supply of the remote control, and the green indicator light of the remote control is always on Attention: do not put it on the slope or in the water before the lights are on the boat. Do not shake the boat.

Calibration

1. Put the boat into the water surface and leave the boat 7 meters away from the shore to ensure that there are no obstacles in the surrounding area;
2. Press the OK + A button (the boat enters the automatic calibration state) and the red light of the remote control flashes. The boat first turns right and then turns left, when finished, stop the rotation and complete the calibration.

Note: Press B to exit the calibration

Anchor Point Storage

1. Only when the GPS icon is displayed can the positioning point be stored
2. Press the OK + 1234 key to store any location. At most 4 positioning points can be stored at a time. After the operation is successful, the screen will display the corresponding number is displayed.
3. Press the OK key for a while to automatically clear all stored information.

Automatic Return And Cruise Operation

1. Set an origin position before using the boat. It is recommended to set No.4 point as the origin
2. Press any key 1-2-3-4 on the remote control to start automatic cruise;
3. When the target point is about 1 m, the cruise is over, the distance will be displayed on the remote control screen, and the display distance is the positioning point and the ship, when the ship deviates or runs in the wrong position, please recalibrate

Note: Press B to exit automatic return.

Cruise Control

1. Push the left and right remote control rod to the top.
2. Press B key to enter cruise mode;
3. The left and right remote control rod can the sailing direction of the boat.

Note: Press B to exit cruise

Boat Power Display

1. The LCD screen displays the boat's power, which has three levels. When the battery icon is in one grid, the battery should be charged or replaced;
2. When the battery icon starts to flash, the boat will automatically return to the origin position (point 4);

Wireless Signal

1. When the boat signal is poor, the remote controller will emit “Dee” sound to remind
2. If the boat have poor signal for a long time, the boat will automatically return to the origin position (point 4)

“FISH” IS A LIFE OF MY LIFE

Ergonomic Remote Control Handle

Streamline boat body

- ◆ Running is more stable
- ◆ Resistance to the wind and wave is more strong

7.4V×5200mAh high battery

- ◆ Fast charging
- ◆ Long time lasting




Instruction To The Battery Usage And Charging

◆ Main Battery(Standard)

The machine has a set of batteries built in. When in use, the battery storage interface can be docked.

◆ Charging Interface

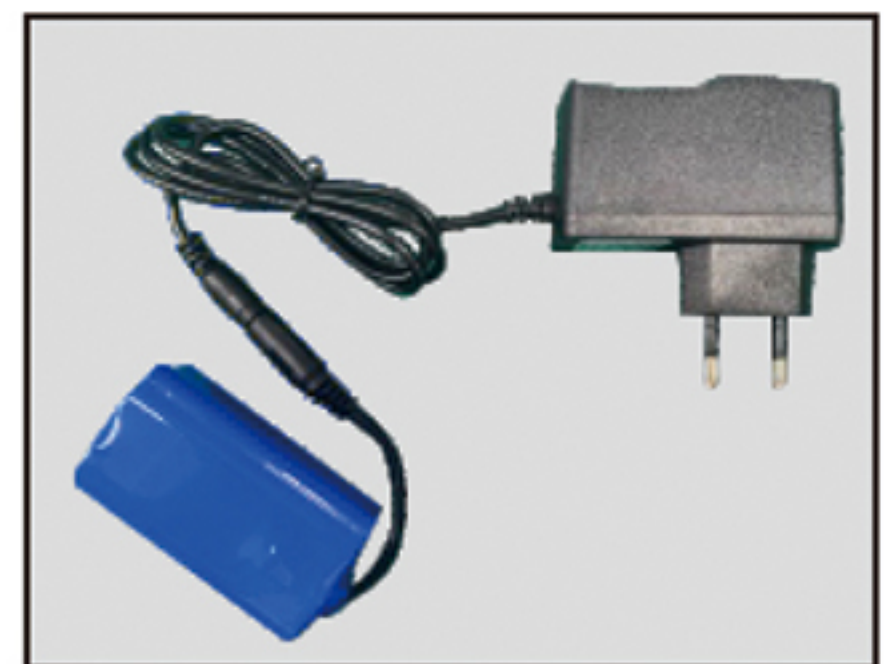

“FISH” IS A LIFE OF MY LIFE

Maintenance

◆ Controller

Please kindly take out the battery if not using.

◆ Motor

Check the motor for debris after each use.

◆ Boat Body

- 1、 Please keep dry and clean for the boat after using the boat
- 2、 Please take out the battery and keep well if not use the boat.
- 3、 Please do not put the boat with the corrosive liquid.
- 4、 Do not close to the high temperature target.
- 5、 Please put the boat away from the dust if do not use the boat.



To know more products, welcome to visit our company
website: <http://www.iRctoy.com>

GPS智能遥控打窝船

 
V010




使用说明书

“渔”悦生活由我智创

产品功能图

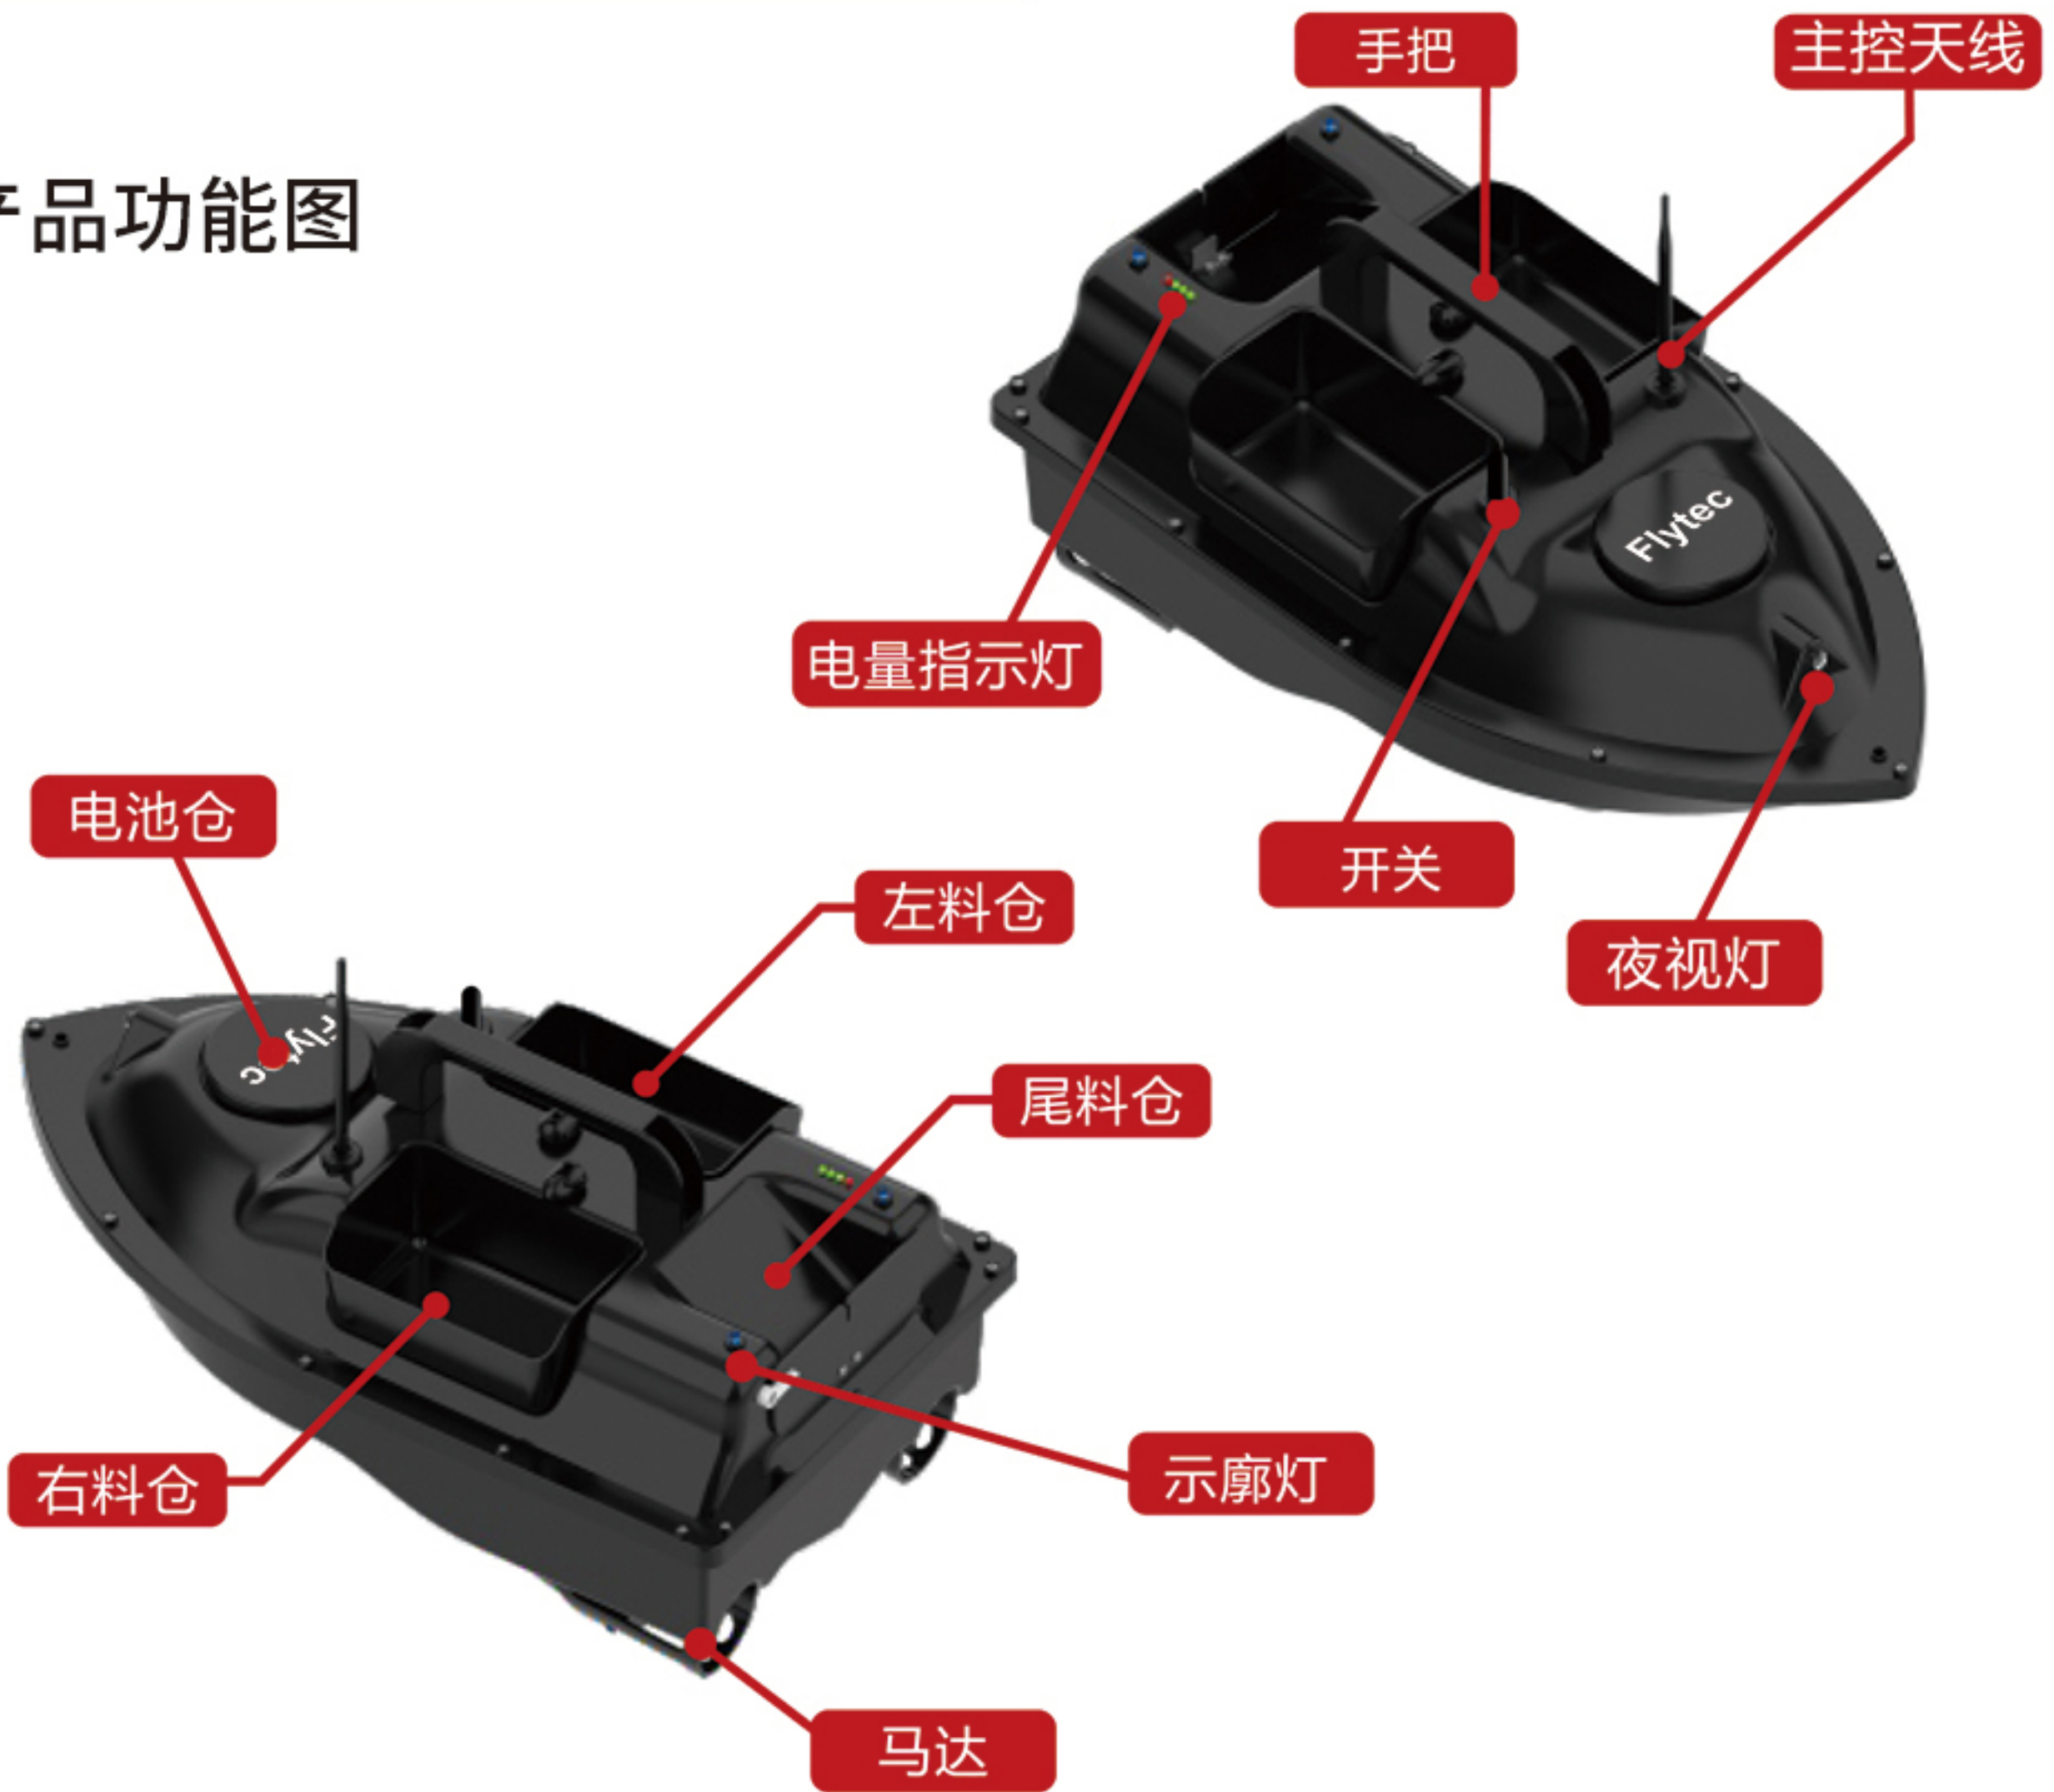

遥控器按键功能说明

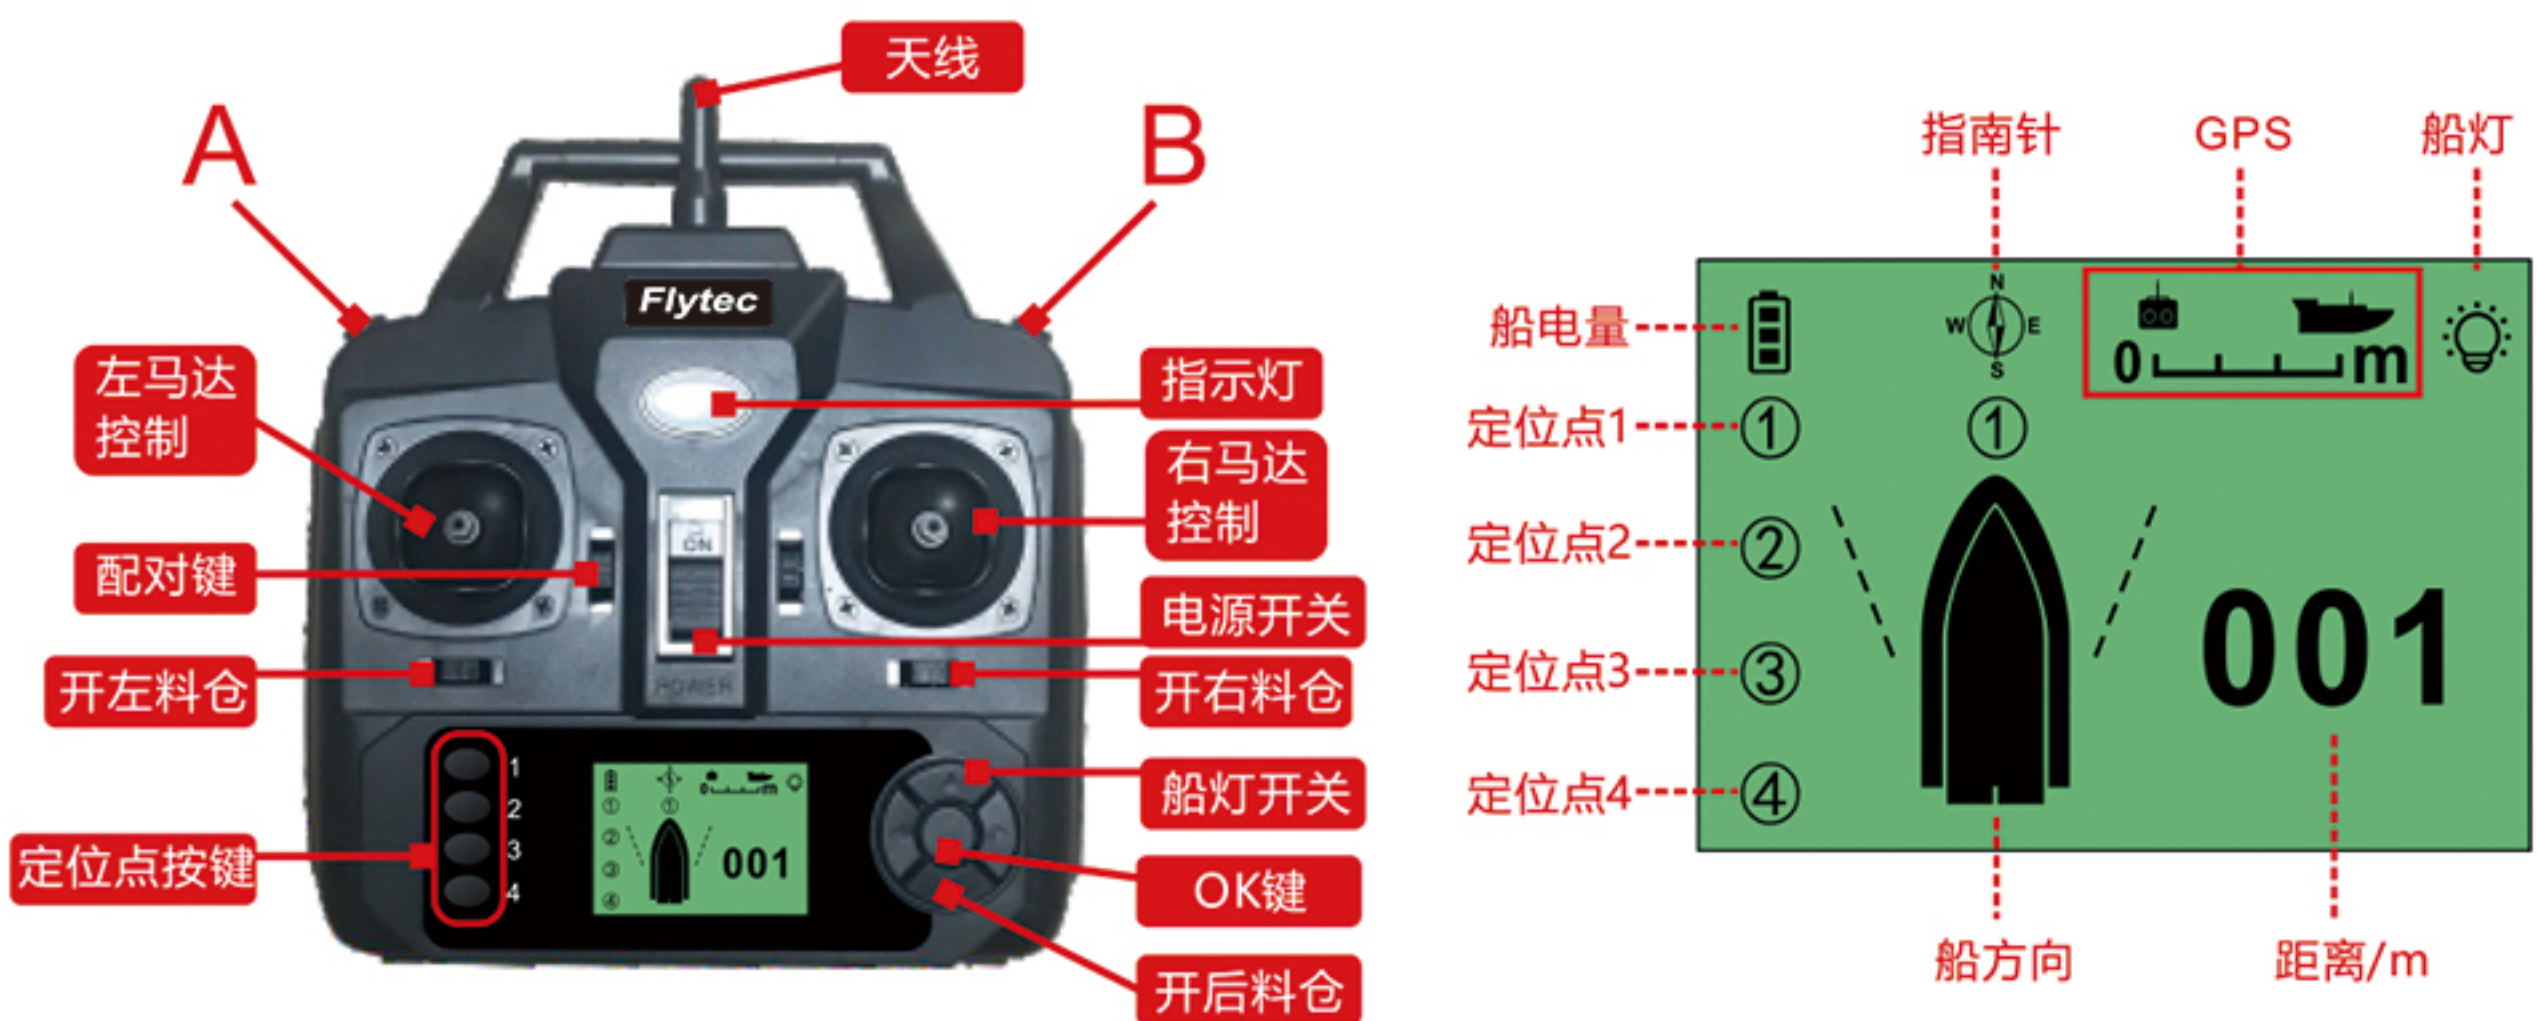 

“渔”悦生活由我智创

开机

- 1.船放置在平坦路面，打开船电源，直到船上灯常亮
 - 2.打开遥控器电源，遥控器绿色指示灯常亮
- 注意：船上灯常亮之前，不要放在斜坡或者水中，不要摇晃船

校准

- 1.船放入水中，将船开出离岸7米远，确保周边无障碍物
 - 2.按下OK键+左上角按钮，（船进入自动校准状态）遥控器红灯闪动，船先右转一圈，然后左转一圈，完成后停止转动，校准完成。
- 备注：按B按键退出校准

定位点存储

- 1.GPS图标有显示时，才能操作定位点存储
- 2.船体行驶中，按下OK+定位点1234按键任意一点进行地点存储，一次最多存储4个定位点，操作成功后，屏上显示相应编号
- 3.长按OK键，自动清除所有存储信息

自动返航和巡航操作

- 1.在船使用前先设置一个原点，建议设置4号点为原点
 - 2.按下遥控器的地点编号1-2-3-4任意一键，开始自动巡航
 - 3.达到目标点1米左右，巡航结束，（遥控器屏幕上会有距离显示，显示距离为定位点和船的距离）当船出现跑偏或跑的位置不对时，请重新校准
- 备注：按B键退出自动巡航

定速巡航

- 1.遥控杆同时向上推动
 - 2.按B键，进入巡航模式
 - 3.遥控杆可以微调船航行的方向
- 备注：按B键退出巡航

船电量显示

- 1.LCD屏显示船电量，一共有3个等级，电池图标仅剩1格时，应当及时进行充电或者更换电池
- 2.电池图标开始闪烁时，船处于低电状态，船将自动返航到原点（4号点）

无线信号

- 1.船信号差时，遥控器会发出“滴”“滴”的提示声
- 2.当船长时间处于信号较差状态时，船会自动返航到原点（4号点）

“渔”悦生活由我智创

流线型船体

- ◆ 航行更平稳
- ◆ 抗风浪性更强

7.4V×5200mA 大容量电池

- ◆ 充电更快
- ◆ 续航时间更长




电池使用与充电说明:

◆ 主机电池 (标配)

本机内置一组电池，使用时将电池仓接口对接即可

◆ 连接电源

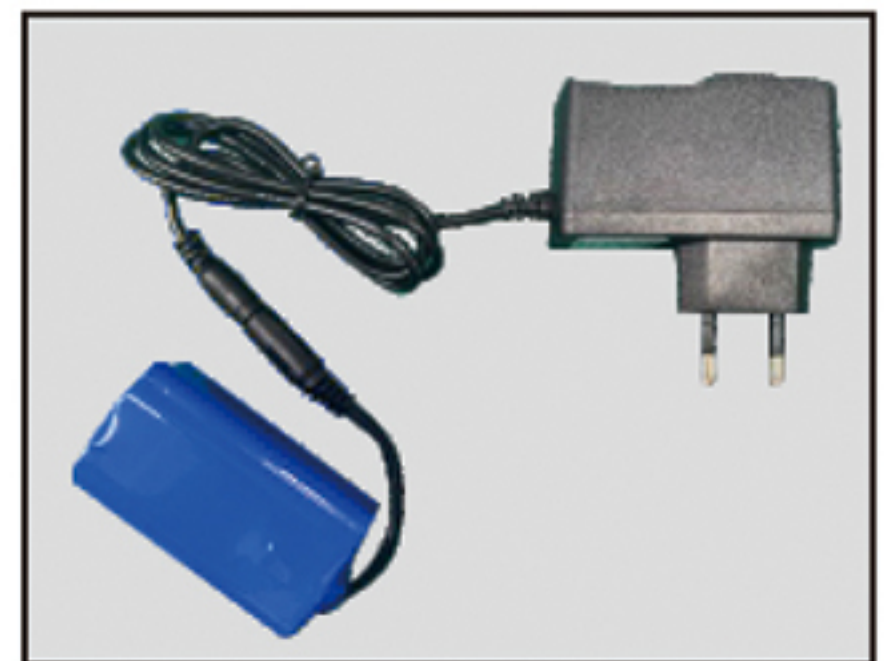

“渔”悦生活由我智创

保养维护

◆ 遥控器

在长时间不使用时请取出电池。

◆ 马达

每次使用完后要检查马达是否有缠绕杂物

◆ 船体

- 1、使用完毕后请擦拭水分保持船体的干燥和清洁。
- 2、电池在长时间不使用时，请取出并充电存放。
- 3、不要把腐蚀性液体和物品一起存放
- 4、请勿靠近高温物体。
- 5、不使用时，请将打窝船存放起来，以防沾尘土。



了解更多产品详情，请查看我们的官网：<http://www.iRctoy.com>